

Dante Via

User Guide



Document version: 2.6

Published: Tuesday, May 7, 2024

Copyright

© 2024 Audinate Pty Ltd. All Rights Reserved.

Audinate®, the Audinate logo and Dante® are registered trademarks of Audinate Pty Ltd.

All other trademarks are the property of their respective owners.

Audinate products are protected by one or more of US Patents 7747725, 8005939, 7978696, 8171152, European Patent 2255541, Chinese Patent ZL200780026677.0, and other patents pending or issued. See

www.audinate.com/patents.

Legal Notice and Disclaimer

Audinate retains ownership of all intellectual property in this document.

The information and materials presented in this document are provided as an information source only. While effort has been made to ensure the accuracy and completeness of the information, no guarantee is given nor responsibility taken by Audinate for errors or omissions in the data.

Audinate is not liable for any loss or damage that may be suffered or incurred in any way as a result of acting on information in this document. The information is provided solely on the basis that readers will be responsible for making their own assessment, and are advised to verify all relevant representation, statements and information with their own professional advisers.

Software Licensing Notice

Audinate distributes products which are covered by Audinate license agreements and third-party license agreements.

For further information and to access copies of each of these licenses, please visit our website:

www.audinate.com/software-licensing-notice

Contents

Copyright	2
About Audinate	8
About Dante	9
One Connection. Endless Possibilities.	9
Overview	10
What is Dante Via?	10
What is a Dante Network?	10
What can you do with Dante Via?	11
Extend your Audio	11
Aggregate Multiple Audio Sources	11
Send Audio Simultaneously to Multiple Destinations	12
Monitor multichannel Audio	12
Specifications	13
Network speed	13
Network Transmit / Receive flows	14
Latency	14
Sample Rate	14
Sample Bit Depth	14
Software Channel Support	14
Hardware Channel Support	14
Total Channel Support	14
Application Support	15
Minimum System Requirements	15
Concepts	16
Sources and Destinations	16
What is a 'source'?	16
What is a 'destination'?	17
Devices and Applications	18
Local Audio Devices	18
Local ASIO Audio Devices	18
Via Devices	18
Dante Devices	18
Local Applications	19
Channel Support	19
Application Visibility	19
ASIO Devices	19
About Audio Interface Drivers	19
Audio Interfaces with Both Types of Driver	20
The Dante Via Interface	21
Licensing and Activation	21
Purchase	21

Activate	21
Start Trial	21
Deactivate	21
Recovering a License	22
Using Dante Via Offline	22
The Dante Via Main Screen - macOS	23
The Dante Via Main Screen - Windows	24
Volume Mixer	25
Searching for Resources	26
Preferences	26
General Preferences	26
Stop / Start Dante Via	26
Default output device for applications mix	27
Default input device for recording applications (Windows only)	27
Show hidden audio devices	27
Show ASIO compatible audio devices	27
Automatically check for updates	27
Clear Configuration (Windows only)	27
Privacy Preferences	28
Make new applications available on the network automatically	28
Make new audio devices available on the network automatically	28
Network devices require my permission	28
Clear Permissions	29
Network Preferences	29
Network Interface	29
Performance Preferences (Windows only)	30
Performance Optimization	30
Performance Tracing	30
Protected Media	30
Locking Preferences	31
Domains Preferences	32
Clear Domain Credentials	33
DDM Controller Permissions for Dante Via	33
Configuration of This Device	33
Dante Network Role	33
Using Dante Via	34
Configuring Your Computer	34
Manually Setting Dante Via as the Default Audio Interface	34
macOS	34
Windows	34
Will my audio routing change when I install Dante Via?	34
Network Connection	35
Multiple network connections	35
Troubleshooting Volume Issues	35
Switching Computer Accounts	35

Stopping and Starting Dante Via	35
Connecting Sources to Destinations	35
Connecting Sources to 'Idle' Destinations	35
Connecting Sources to 'Subscribed' Destinations	36
Stereo Destinations	36
Add Source to Mix	37
Replace Mix with Source	37
Multichannel Destinations	37
Append Source to Destination Channels	38
Replace Existing Subscription with Source	39
Inactive Sources	39
Removing Sources from Destinations	39
Muting Sources in the All Applications Mix	40
Removing Listeners from your Sources	40
Sending Audio to Software Applications	41
In macOS	41
In Windows	41
Built-in Inputs and Outputs	41
In macOS	41
In Windows	41
Audio Routing Permission in macOS 10.15 and Up	42
Default Devices	43
Default Output Device	43
System Sounds	43
Default Input Device (Windows only)	43
All Applications Mix	43
Software Application Visibility	44
Windows	44
macOS	44
Exposing Sources and Destinations to the Dante network	44
Exposing Sources	44
Exposing Destinations	45
Using Dante Controller to Route Audio	45
Privacy and Permissions	45
Mute All	46
Channel Mapping	46
Audio Format	47
Latency	47
Dante Virtual Soundcard	47
Dante Domain Manager	47
Troubleshooting	49
Licensing and Activation	49
I don't have a license key	49
I activated Dante Via but the user interface is empty	49
Dante Via won't run (Windows)	49

Audio Problems - First Things to Check	49
Sources Not Appearing	50
General	50
Locally-connected Hardware Sources (Local Audio Devices) Not Appearing	51
Windows	51
macOS	51
Software Sources (Local Applications) Not Appearing	52
Troubleshooting	52
Windows only: WDM applications not appearing	52
Audio sources on other Dante Via-installed computers (Via Devices) Not Appearing	52
Windows and macOS	52
Networked Dante-enabled Hardware Sources (Dante Devices) Not Appearing	53
Windows and macOS	53
Destinations Not Appearing	53
General	53
Locally-connected Hardware Destinations (Local Audio Devices) Not Appearing	53
Windows and macOS	53
Software Destinations (Local Applications) Not Appearing	53
Windows	53
macOS	54
Distorted Audio	54
Windows	54
Absence of Audio	54
Absence of Audio from Locally-connected Hardware Sources (Local Audio Devices)	54
Absence of Audio from Software Sources (Local Applications)	55
Absence of Audio from Other Computers (Via Devices)	55
Access Control	55
Absence of Audio from Networked Dante-enabled Hardware Sources (Dante Devices)	55
Video streaming apps don't work anymore (Windows)	55
iTunes is not appearing in the Dante Via UI / is not playing audio. Why is this? (Windows)	56
Device In Use (Windows)	56
Unable to Initialize (Windows)	57
Insufficient Resources	58
User Interface Notifications	58
Icons Displayed in the Dante Via User Interface	58
Subscription Notifications	60
Unresolved subscriptions	60
Failed subscriptions	60
Common subscription notification tooltips	60
Source audio format incompatible	60
This resource is in a different clock domain	60
Permission to listen has not been allowed	60
Error and Warning Messages	60
Checking That the Dante Via Sound Device is Enabled in Windows	61
Control Panel Sound Settings	62

Device Manager	63
Index	66

About Audinate

Audinate® is the leading provider of professional AV networking technologies globally. Audinate's Dante platform distributes digital audio and video signals over computer networks, and is designed to bring the benefits of IT networking to the professional AV industry. AV-over-IP (AVoIP) using Dante-enabled products ensures interoperability between AV devices and allows end users to enjoy high quality, flexible solutions – typically with a lower total cost of ownership.

About Dante

One Connection. Endless Possibilities.

Dante replaces all audio and video connections with a computer network, effortlessly sending video or hundreds of channels of audio over slender Ethernet cables with perfect digital fidelity.

Adopted by hundreds of manufacturers in thousands of products, Dante is the de facto standard for modern AV connectivity.

For more information, please visit the Audinate website at getdante.com.

Overview

What is Dante Via?

Dante Via is a software application that allows you to quickly and easily connect high-quality audio between audio-capable hardware devices and software applications, both locally and across a Dante network.

Dante Via:

- Provides Dante audio connectivity between all audio-capable devices and software applications on your computer. This means you can easily route audio internally around your computer without having to individually configure each device or application, and you can independently route audio to and from audio-capable software that doesn't natively support audio routing. For example, using Dante Via you can route iTunes to multiple external soundcards simultaneously.
- Exposes to the Dante network all available hardware and software audio sources available on your computer. This means you can share your audio with other users and devices on the Dante network. You can easily specify exactly which devices and applications are exposed to the network, and which aren't.
- Displays all shared audio sources on or connected to other Dante Via-installed computers on the network. This means you can route audio from other computers and devices to wherever you want on your own computer, or to audio devices connected to your computer.
- Displays remote (not computer-connected) Dante-enabled audio devices on the network, such as Dante-enabled mixing consoles. Using Dante Via you can route audio from remote Dante devices to your own destinations. In combination with Dante Controller, you can also 'push' audio to remote devices.
- Enables computer-only Dante networks (does not require a Dante hardware clock).

Dante Via automatically scans the computer for running audio-capable software applications, and connected audio-capable hardware devices, and displays them as audio sources and/or destinations in the user interface.



Note: On Windows, software applications must be actively playing or recording to be initially discovered by Dante Via ([more information](#)).



Note: On macOS, software destinations are not displayed ([more information](#)). Software sources must be actively playing to be initially discovered by Dante Via.

What is a Dante Network?

A Dante network is basically any IP over Ethernet network to which two or more Dante devices - including any computers running Dante Via - are connected. (A Dante network on which there is only one Dante device isn't technically a 'network' - however you can use Dante Via to route audio internally in your computer.)

'IP over Ethernet' is a networking model that uses Ethernet technology for the physical network, and the Internet Protocol for controlling how data is moved around the network. Dante audio can be described as 'Audio over IP'.

Dante networks can be:

- Dedicated - a network to which only Dante devices are connected (often used for recording studios, live sound and professional audio installations) - or:
- Shared between Dante and other network applications, such as office data, email, file management, VoIP telephony, or virtually any other type of network traffic. Standard networking features such as QoS (Quality of

Service) can be used to ensure that Dante audio gets priority if required, to maintain perfect audio synchronization - however it is not usually required for fast (Gigabit) networks.

What can you do with Dante Via?

Using Dante Via, you can:


- Route audio independently between software applications and/or hardware devices on or connected to your computer
- Share your audio with other users and devices on the Dante network
- Route audio from network sources to your own computer or peripherals
- Aggregate audio from multiple sources to one or many destinations
- Distribute audio to multiple destinations simultaneously
- Push audio to remote Dante-enabled devices (requires Dante Controller)

Extend your Audio

Dante Via enables and simplifies countless audio routing configurations.

With Dante Via, you can quickly and easily transmit any audio to a destination on the Dante network - for example, you could send USB microphone output from a hall or classroom to an amplifier and speakers in an overflow room.

In this example, Dante Via is exposing a USB microphone to a Dante network. Dante Controller is then used to push the Via audio to a Dante-enabled amplifier in another room, allowing people to hear sound from the microphone.

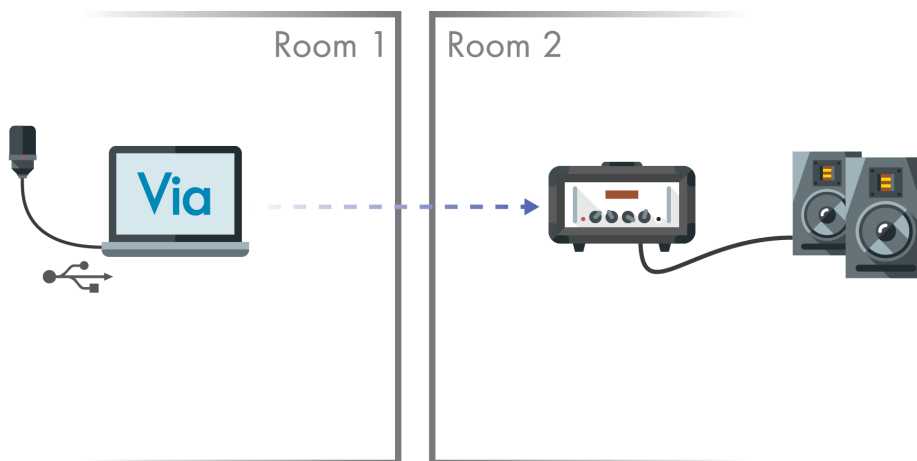


Aggregate Multiple Audio Sources

You can easily aggregate audio from multiple source types and send it to one or more destinations, without the need for a mixing console.

For example, you could simultaneously send stereo mixes from a USB soundcard and a FireWire® soundcard to a recording application.

You could also expose the recording application on the Dante network for remote monitoring.

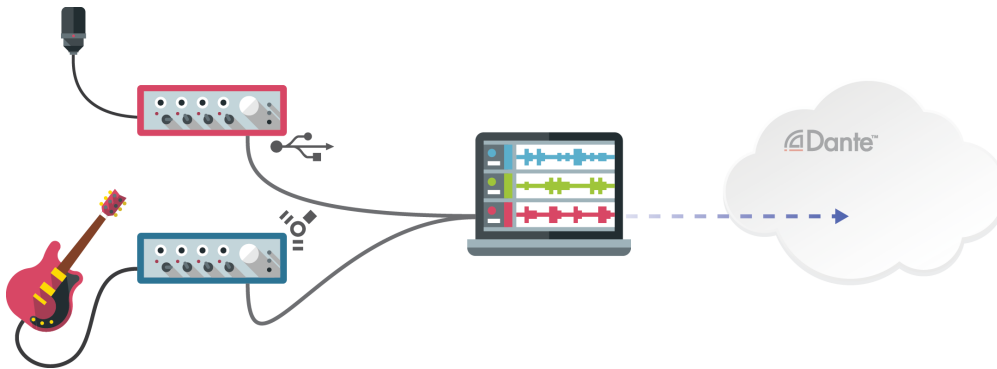

Send Audio Simultaneously to Multiple Destinations

Some audio sources, particularly consumer software applications such as iTunes® or Windows Media Player®, do not allow you send audio to multiple destinations.

Dante Via overcomes this limitation, so you can send any audio from any application or device to multiple locations at once.

This means, for example, that you could send iTunes to two separate soundcards - one for monitoring, and one for amplification.




Monitor multichannel Audio

Using Dante Via and Dante Controller, you can monitor individual channels on a networked multichannel device, such as a Dante-enabled mixing console.

To do this, first expose your chosen monitoring device (such as a pair of USB headphones) to the Dante network, by selecting 'Enable Dante' in the headphones destination pane in Dante Via.

Then launch Dante Controller. Your headphones will now appear as Dante channels in Dante Controller, nested under your computer name.

Using Dante Controller, you simply send individual channels from the mixing console to your headphones, just like any other Dante device.

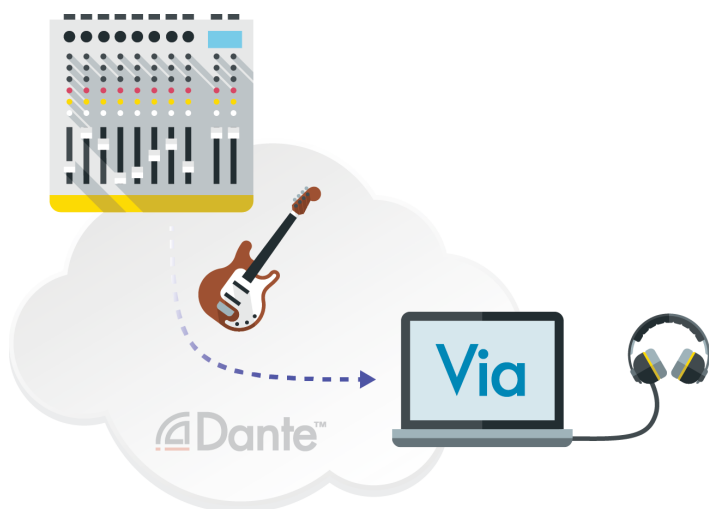

Specifications

Network Audio	
Network speed	100 /1000 Mbps Ethernet
Network Transmit flows	16 (unicast or multicast) - up to 4 channels per flow
Network Receive flows	16 (unicast or multicast) - up to 4 channels per flow
Latency	From 10ms (excluding auxiliary signal paths)
Sample rate	48 kHz
Sample bit depth	24 bit
Audio Interface	
Software channel support	Core Audio & ASIO: Up to 16 x 16 channels WDM: Up to 2 x 2 channels
Hardware channel support	Up to 32 x 32 channels
Total channel support	Up to 48 x 48 channels
Application support	Up to 8 application or mix audio connections

Network speed

Dante Via supports Ethernet networks that use 100 Mbps and 1000 Mbps (Gigabit) infrastructure. Dante generally performs better on Gigabit networks. Quality of Service (QoS) can be used to improve Dante performance on slower networks that are shared with non-Dante applications.

Network Transmit / Receive flows

'Flows' are audio streams of up to 4 channels that are used to transport audio across a Dante network (outside the host computer). Grouping channels together into flows conserves bandwidth.

16 flows of up to 4 channels allows the transport of up to 64 bidirectional channels simultaneously across a Dante network.

If you exceed the number of supported flows, you will see an 'Insufficient Resources' error dialog.

Latency

Latency is a delay that digital audio devices and applications introduce into an audio stream as a result of (or to allow for) the processing of audio packets. Dante Via's internal latency is ~10ms. However, auxiliary signal paths (for example, paths to USB-connected devices) will also add latency.

On Windows, adjusting the Performance Optimization slider in the [Performance preferences](#) will affect Dante Via's latency.

Sample Rate

Dante Via's native sample rate is 48 kHz. Sample rate conversion is performed automatically in both directions for locally-connected devices: Incoming audio is converted to 48 kHz, and outgoing audio is converted from 48 kHz to match the sample rate required by the destination device.

Remote (networked) Dante hardware devices must be set to 48 kHz to be supported by Dante Via.

For software applications, sample rate conversion is performed automatically by the operating system.

Sample Bit Depth

Dante Via's native bit depth is 24-bit - however, Dante Via converts incoming audio to 24-bit automatically.

Software Channel Support

Dante Via supports 16 x 16 channels for ASIO and Core Audio software applications and 2 x 2 channels for WDM software applications.

Hardware Channel Support

Dante Via natively supports up to 32 x 32 channels for hardware devices (although more channels can be subscribed using Dante Controller).

Total Channel Support

Dante Via supports a total of 48 source channels and 48 destination channels. This means that you could theoretically run 24 stereo sources into 24 stereo destinations simultaneously, on a sufficiently-powerful computer.

However, audio mixes (including the '[all applications mix](#)') require their own additional channels, which deduct from the total supported source channel count.

On macOS, the stereo and 16 Channel Application Inputs occupy 2 and 16 source channels respectively.

Individual computer performance and tuning can affect the number of channels that are practically supported.

Application Support

The number of Dante Via interfaces to software applications is limited to 8 (due to the extra processing required for software connections). Similarly, audio mixes (including the [all applications mix](#)) are limited to 8 simultaneous mixes.

Minimum System Requirements

- 64-bit macOS 11, 12 and 13
 - Rosetta 2 is required for Apple Silicon machines
- 64-bit Windows 10 or 11
- Intel or AMD Quad-core CPU or above
- 4 GB RAM
- 1 GB storage
- 1Gbps wired network interface / adaptor (Wi-Fi is not supported)
- 1Gbps network switch
- Active Internet connection *

* Dante Via regularly connects to the Audinate licensing server to validate its license and refresh its activation. See [Licensing and Activation](#) for more information.



Important: Device drivers for all installed and locally-connected audio-capable devices must be up to date, and any residual legacy device drivers must be fully removed.



Note: Dante Via does not support virtual machines - it must be installed on a computer with a standard Windows or Mac macOS operating system.

Concepts

Sources and Destinations

What is a 'source'?

In Dante Via, a source is any hardware device or software application that can add audio to the computer / network system.

Sources can be physically in the computer, connected to the computer, or connected to the Dante network.

Hardware sources (devices) include:

- Internal (built-in) soundcards
- External (e.g. USB or FireWire) soundcards
- Internal and external microphones
- USB headsets
- Video cameras with built-in microphones
- Dante audio devices (such as mixing consoles)
- Hardware synthesizers, and other electronic instruments
- Any Dante Via-installed computers on the Dante network
- 'System audio' (the internal audio mix that the computer would usually play to the speakers)


Software sources (applications) include:

- iTunes®
- Skype®
- Digital Audio Workstations (Cubase®, Pro Tools®, GarageBand® etc.)
- Media players (VLC®, Spotify®)
- Web browsers
- Any other software applications that produce audio (such as games, PowerPoint®, email clients etc.)

Devices and applications that can add audio to the system and receive audio from the system are both sources and receivers, so they appear in both lists.

Q: Why is a microphone a 'source' and not a 'destination'?

A: Microphones receive audio from the physical environment, but not from the computer / network system; they **add** audio to the system, which is why they are sources.

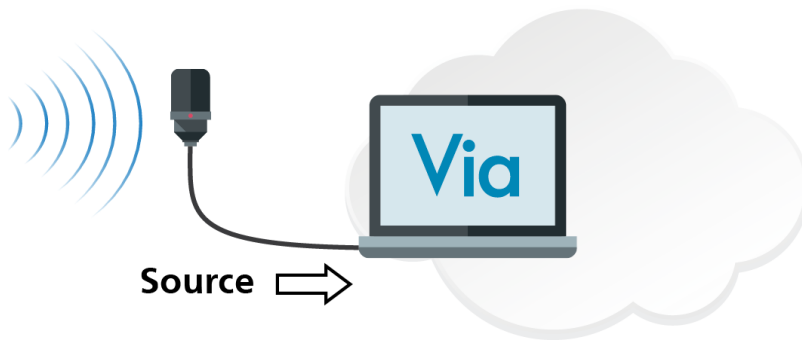

What is a 'destination'?

In Dante Via, a destination is any hardware device or software application that can receive audio from the computer / network system.

Destinations can be physically in the computer, connected to the computer, or connected to the Dante network.

Hardware destinations (devices) include:

- Loudspeakers
- Internal (built-in) soundcards
- External (e.g. USB or FireWire) soundcards
- Computer monitors with built-in speakers
- USB headsets
- Dante audio devices (such as mixing consoles)
- Any Dante Via-installed computers on the Dante network


Software destinations (applications) include:

- Digital Audio Workstations (Cubase, Pro Tools, GarageBand etc.)
- Other audio recording applications
- Skype

Devices and applications that can receive audio from the system and add audio to the system are both destinations and sources, so they appear in both lists.

Q: Why is a loudspeaker a 'destination' and not a 'source'?

A: Loudspeakers add audio to the physical environment, but not to the computer / network system; they **receive** audio from the system, which is why they are destinations.

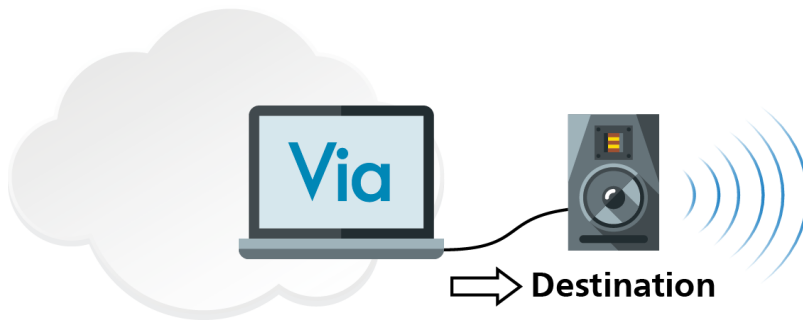

Devices and Applications

Local Audio Devices

Local Audio Devices are audio-capable hardware devices that are local to your computer - i.e. they are either internal, or directly physically connected to your computer.

Examples include:

- Internal (built-in) soundcards (referred to as 'Built-in Output' in macOS)
- External (e.g. USB or FireWire) soundcards
- Internal and external microphones
- USB headsets
- Desktop computer speakers
- Computer monitors with built-in speakers

Local ASIO Audio Devices

(Windows only)

Local ASIO Audio Devices are hardware devices (typically audio interfaces) with ASIO drivers. Note that these devices may also have WDM drivers, in which case they will also appear in Local Audio Devices, often under a different name.

Requires that 'Show ASIO compatible devices' is checked in the [general preferences](#).

Via Devices

Via Devices are other computers on your local area network on which Dante Via is installed and running.

Via Device names are taken from the host computer name.

If they have sources or destinations for which 'Enable Dante' is active, those resources will appear under the device name.

Dante Devices

Dante Devices are Dante-enabled hardware devices (such as mixing consoles and amplifiers) that are connected to your local area network.

Dante Devices must be set to 48 kHz sample rate in order to appear in the Dante Via user interface.

To 'push' audio to Dante Devices, you must configure the routing in Dante Controller.

Local Applications

Local Applications are audio-capable software applications, such as:

- iTunes
- Skype
- Digital Audio Workstations (Cubase, Pro Tools, GarageBand etc.)
- Web browsers
- Other software applications that produce audio (such as games, PowerPoint, email clients etc.)

Channel Support

Dante Via supports 16 channels for individual ASIO and Core Audio software applications and 2 channels for WDM software applications. The number of applications that can be simultaneously supported is determined by the [channel support](#) and the computer specifications.

Application Visibility

It is recommended that you start audio applications *after* starting Dante Via.

macOS

In macOS, software applications do not appear in the Destinations list. To send sources to software applications in macOS, you must send them to the Stereo Application Input or the 16 Channel Application Input, and then configure the application to use Dante Via as the recording / input interface.

Software applications will not appear in the Local Applications list until they are playing audio.

Windows

In Windows, software applications will not appear in either of the Local Applications lists (sources or destinations) until they are either playing audio (sources) or recording audio (destinations).



Note: It may also be necessary to select Dante Via as the input and/or output device in the application itself.

If when you start Dante Via a running audio application is not visible in the Dante Via UI, quit and then restart the audio application. You may also have to play or record audio using the application before it appears in Dante Via.

ASIO Devices

About Audio Interface Drivers

Hardware audio interfaces (such as Focusrite Scarlett, M-Audio M-Track and PreSonus AudioBox) require drivers to enable communication between the device and the computer to which they are connected. Drivers are small software programs that typically have to be specifically installed on the computer before the device can be used (some devices however use 'default' operating system drivers).

Typically, audio interfaces come with drivers for Mac macOS and Windows.

For macOS, drivers are written for 'Core Audio', which is the native audio infrastructure in macOS.

For Windows, drivers are typically written for WDM (Windows Driver Model) and/or ASIO (Audio Stream Input/Output). WDM is the standard model for most varieties of Windows drivers, and provides a controlled, traditional route into and out of the computer hardware. ASIO is a more 'direct' audio driver protocol that bypasses

some of the Windows software layers, enabling lower latencies. You could think of WDM as walking in through the main entrance and taking the elevator to your floor, and ASIO as abseiling straight in through the window, from a helicopter.

Prior to version 1.1, Dante Via supported only WDM drivers for Windows. This meant that audio interfaces appeared in Dante Via in their WDM guises. Some audio interfaces, for example, might support 8 or 16 hardware channels of audio, but the WDM driver was only written for 2 channels - so the device would appear in Dante Via as a 2-channel device, and you could only route 2 channels of audio through it using WDM.

From version 1.1, Dante Via also supports ASIO drivers. This means that some ASIO-compatible devices will now present more channels to Dante Via, and you can also enjoy the lower latencies provided by ASIO drivers, where they are available.

ASIO devices are indicated by this icon:



Note: The increased channel support for audio interfaces can increase the likelihood of resource limit problems (see [Insufficient Resources](#)).

Audio Interfaces with Both Types of Driver

Some Windows drivers for audio interfaces will install a WDM and an ASIO driver. The WDM driver will usually be used by 'consumer-level' audio-enabled software (such as Skype), and the ASIO driver will usually be used by professional audio software (such as Nuendo).

Dante Via can detect both drivers - the 'Show ASIO compatible audio devices' option in the general preferences determines which driver types are displayed in the user interface. When the option is selected, audio interfaces with WDM and ASIO drivers will appear as two separate sources, and two separate destinations (assuming the interface supports both input and output).


The actual device names may vary. For example, a Focusrite Scarlett 2i2 USB interface will appear in Audio Sources > Local Audio Devices as 'Line In Scarlett 2i2 USB', and in Audio Sources > Local ASIO Audio Devices as 'Focusrite USB 2.0 Audio Driver'. In Audio Destinations > Local Audio Devices it will appear as 'Line Out Scarlett 2i2 USB', and in Audio Destinations > Local ASIO Audio Devices as 'Focusrite USB 2.0 Audio Driver'.



Important: Some interfaces do not support use of the WDM and ASIO driver simultaneously, and may even become unstable if one driver is initialized while the other is active. For these interfaces, it is recommended that the active driver is fully 'disengaged', by removing all audio subscriptions to and from the active driver, before attempting to route audio using the other driver. It may also be necessary to power-cycle the hardware device. Also, some ASIO drivers do not report full and/or accurate information to Windows, and as such may require that the PC is rebooted if the driver stops responding.

The Dante Via Interface

Licensing and Activation

 **Note:** Activation requires an active Internet connection.

To open the Activation panel in macOS, from the Dante Via menu, select 'Activation'.

To open the Activation panel in Windows, select  > 'Activation'.

The Activation panel allows you to:

- Purchase a Dante Via license
- Activate Dante Via using an existing license
- Start a trial activation
- Deactivate an active installation of Dante Via

Purchase

The 'Purchase' button will take you to the Audinate website, where you can purchase a Dante Via license.

You can view your Dante Via licenses at the 'My Products' page on www.audinate.com.

To access your Products page:

1. Log in to www.audinate.com.
2. Click 'My Account' at the top right of the page.
3. Click 'My Products'.

Activate

The 'Activate' button allows you to activate an existing license. Enter the License ID that has been provided to you and click 'Activate' to activate the license.

Click 'View Your Licenses' to log into the Audinate website at your 'My Products' page.

Start Trial

The 'Start Trial' button initiates a trial activation. You do not need an existing www.audinate.com user account to start a trial, you can create one as part of the process.

Trial activations last for 30 days, and are fully-functional. You can only use the trial option once per computer. When the trial period expires, to continue using Dante Via, you must purchase a full Dante Via license.

Deactivate

The 'Deactivate' button deactivates Dante Via for that computer, which allows you to reactivate Dante Via on a different computer (using the 'Activate' option).

Recovering a License

If you are unable to deactivate a Dante Via license because you cannot access the computer for which it was used, you can recover the license from the 'My Products' page on www.audinate.com.

To access your Products page:

1. Log in to www.audinate.com.
2. Click 'My Account' at the top right of the page.
3. Click 'My Products'.


The license recovery information is in the 'My Dante Via Licenses' section.

Using Dante Via Offline


Dante Via regularly connects to the Audinate licensing server to confirm the validity of its license, and to 'refresh' the activation. In the absence of an active Internet connection, it will remain operational for a maximum of 30 days, after which time it will automatically deactivate.

To ensure continuous operation, you must run Dante Via with an active Internet connection at least once every 30 days.


The Dante Via Main Screen - macOS

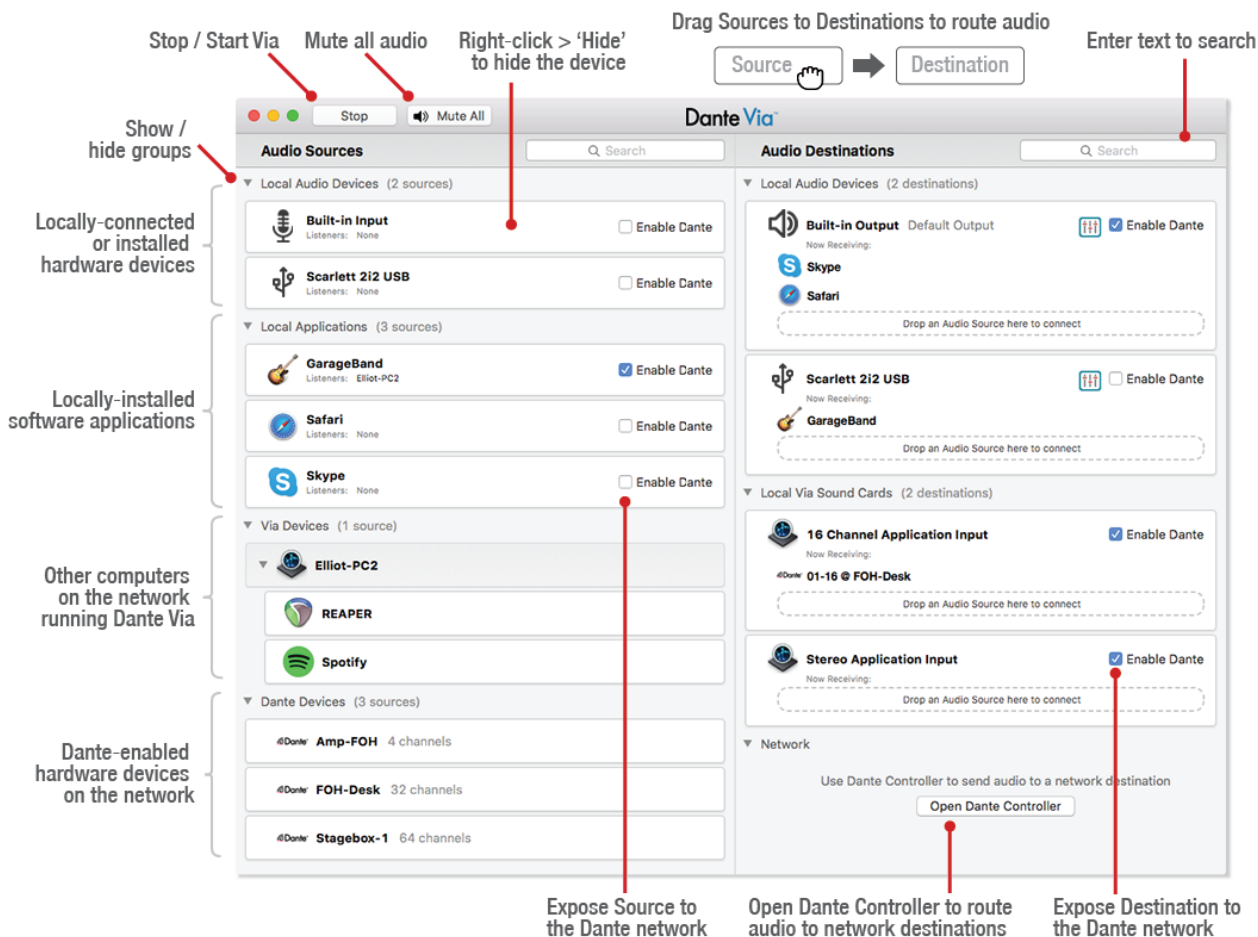


The Dante Via Main Screen - Windows

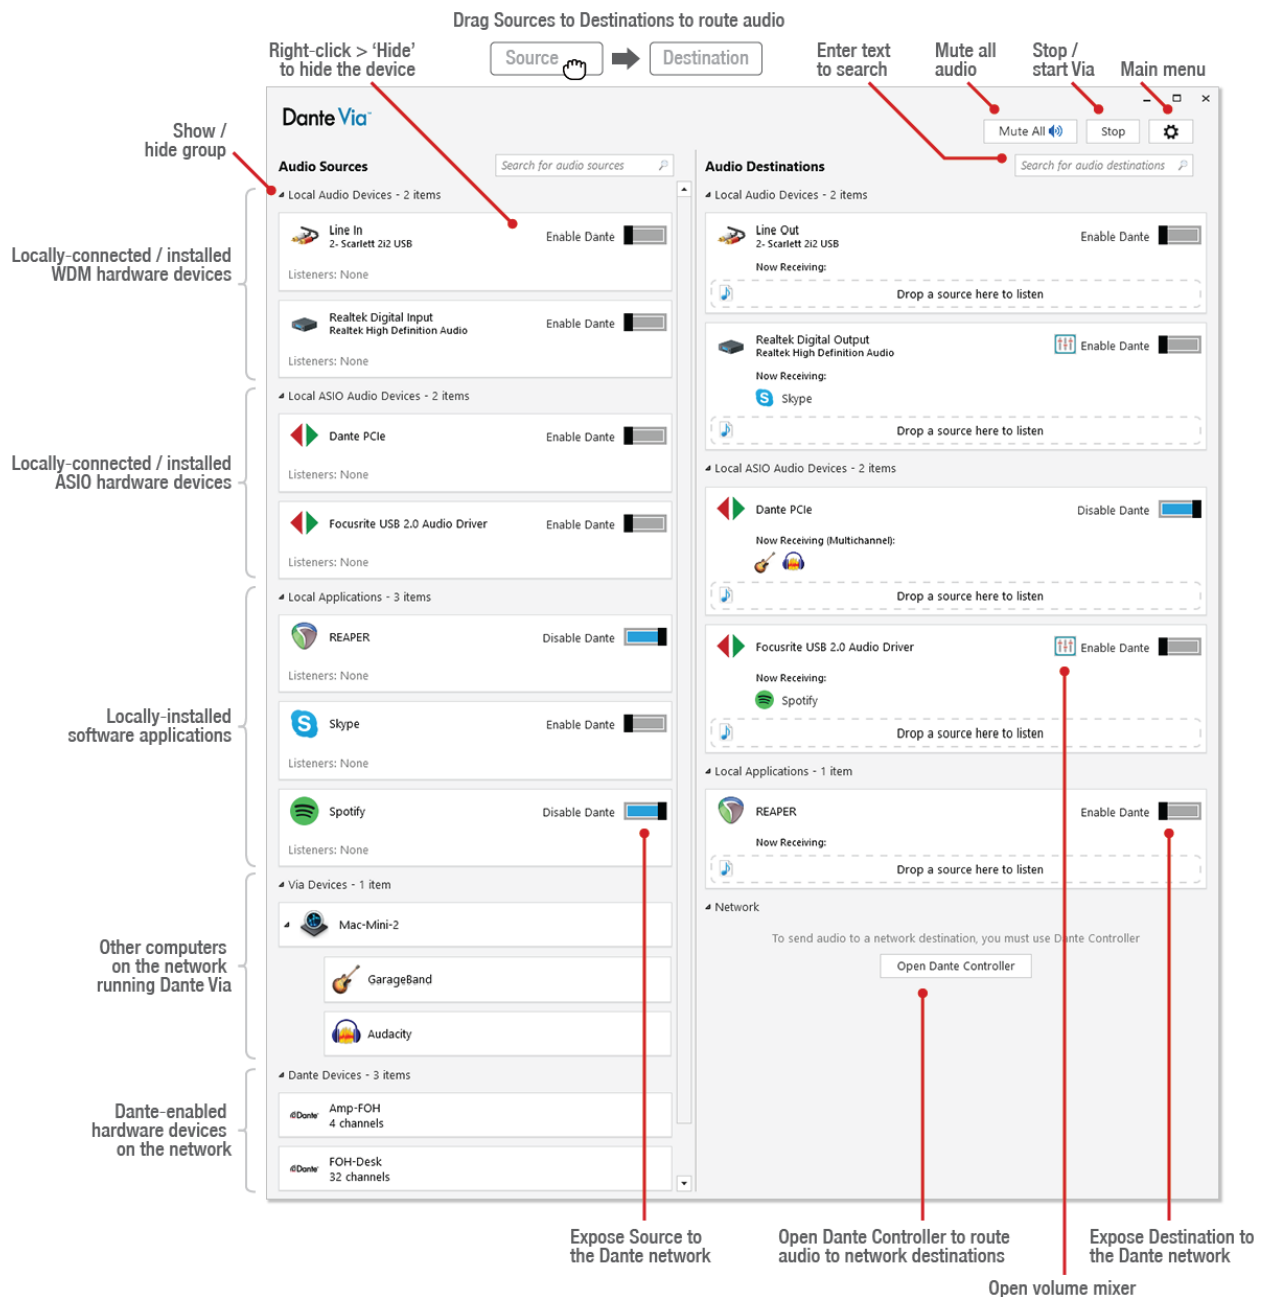

Volume Mixer

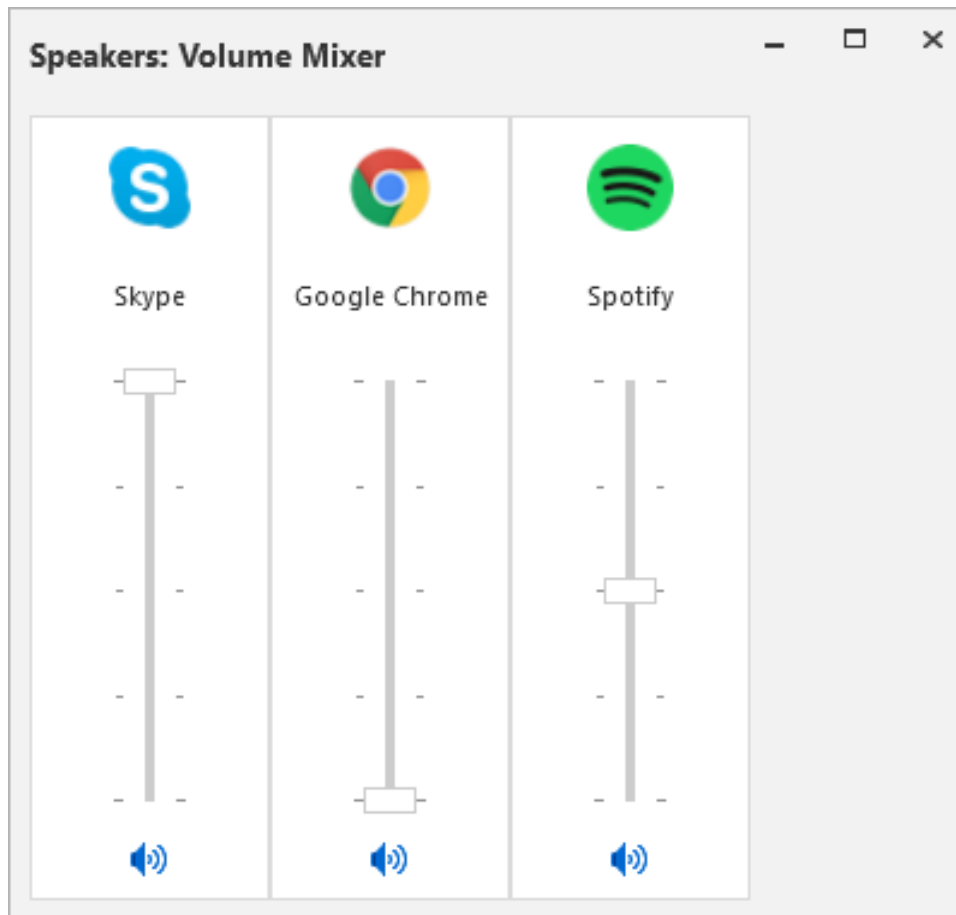



The volume mixer is enabled for stereo destinations that are actively receiving one or more sources.

Open the volume mixer using the button at the top right of the destination panel: 

The volume mixer includes a volume slider and a mute button for each source assigned to the destination. Drag the volume slider to change volume levels.

Volume and mute settings persist when the volume mixer is closed.

 **Note:** The volume mixer is not supported for the [all applications](#) mix or multichannel destinations.

 **Note:** You cannot make changes in the main Dante Via UI while the volume mixer is open.


Searching for Resources

To search for a particular source or destination, type the first few letters of the resource name into the appropriate search field.

To clear the search, delete the text from the search field.

Preferences

General Preferences

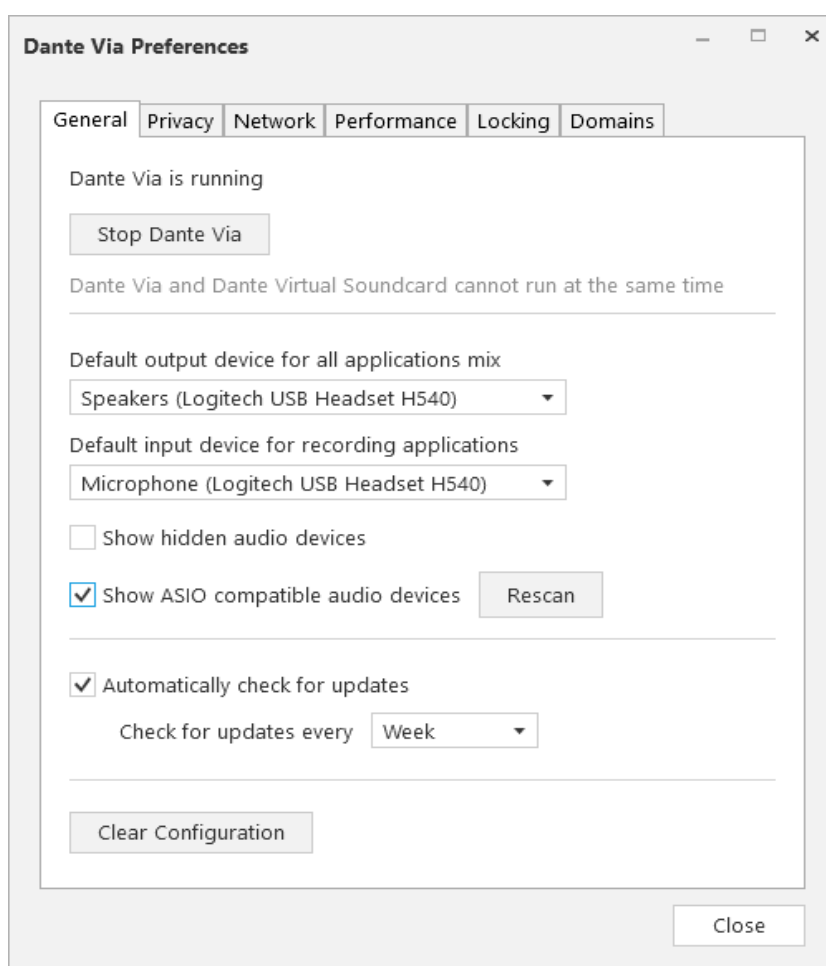

Stop / Start Dante Via

Use this button to turn the Dante Via 'engine' on or off.

When Dante Via is running, your computer will use Dante Via as the default audio interface (unless you have selected an alternative default device after installing Dante Via).

When Dante Via is not running, your computer will revert to the previous default hardware audio interface.

Default output device for applications mix

Use this menu to select the default local output device to which Dante Via will send newly-discovered application sources and the '[all applications mix](#)'.

The selected default device is identified with the text 'Default Device' in the Destinations column.

Default input device for recording applications (Windows only)

Use this menu to select the default local input device which Dante Via will assign to newly-discovered application destinations.

Show hidden audio devices

Reveals devices that have been hidden. To hide a device, right-click it and select 'Hide'.

Show ASIO compatible audio devices

Scans for ASIO-compatible audio devices and displays them in the sources and destinations panels. Use the Rescan button to find recently-connected devices.



Important: Use with caution - ASIO audio drivers vary greatly from product to product, and their use may result in inconsistent behavior and system instability. If you experience crashes or similar issues when using ASIO drivers, it is recommended that you disable this feature. [Click here](#) for more information.


Automatically check for updates

When selected, Dante Via will go online periodically to check if there is a new version available for download on the Audinate web server. Requires an active Internet connection.

Clear Configuration (Windows only)

Clears all audio routing, permissions and preferences. Requires administrator privileges for the computer. If Dante Via becomes unstable, this function can be used to reset it.

Privacy Preferences

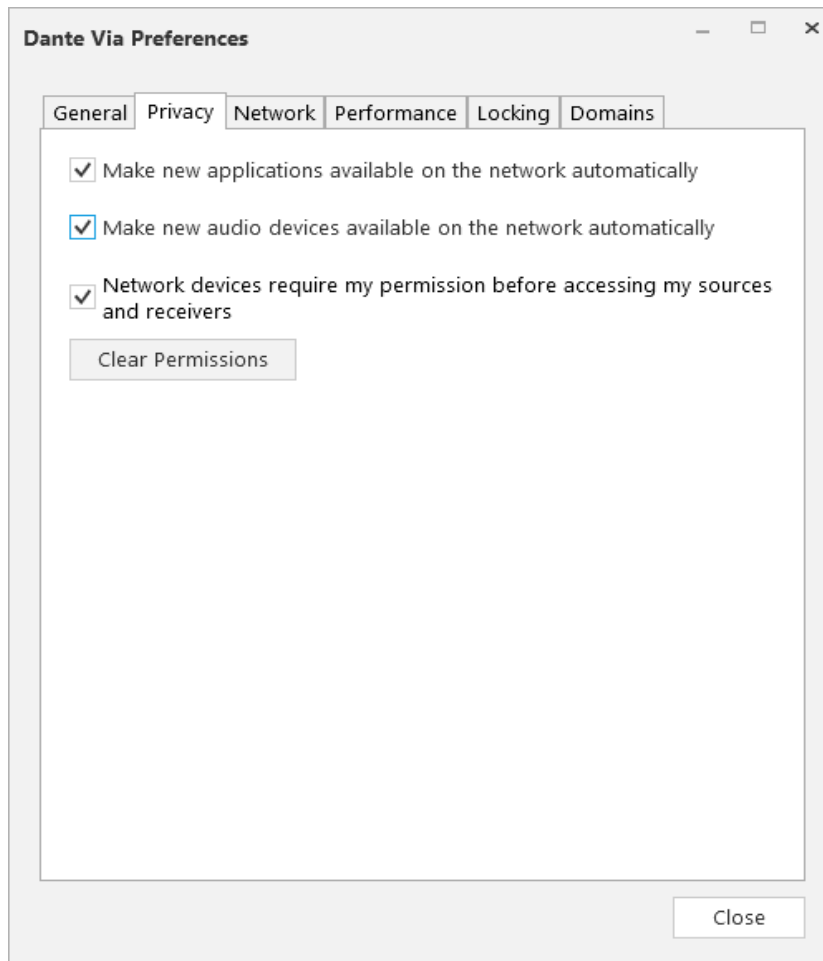

Make new applications available on the network automatically

When selected, software applications that are started in future will be automatically Dante-enabled (exposed to the network). Permission will still be required for new connections (based on the above settings).

When not selected, software applications that are started in the future will not be Dante-enabled by default.

Make new audio devices available on the network automatically

When selected, audio devices that are started in future will be automatically Dante-enabled (exposed to the network). Permission will still be required for new connections (based on the above settings).

When not selected, audio devices that are started in the future will not be Dante-enabled by default.

Network devices require my permission ...

If selected, when any user first tries to connect to one of your sources, you will be presented with a pop-up dialogue asking you to allow or deny the connection (see [Privacy and Permissions](#) for more information).

If not selected, any user can connect to and receive audio from any of your Dante-enabled sources at any time, *without your permission*.




Important: Be very careful with this option. Audinate accepts no responsibility for privacy issues that result from the use of this option.

Clear Permissions

Revokes all previously granted permissions. When clicked, any new connections to any of your sources will require your permission, and any existing connections will require permission to be re-granted.

Network Preferences

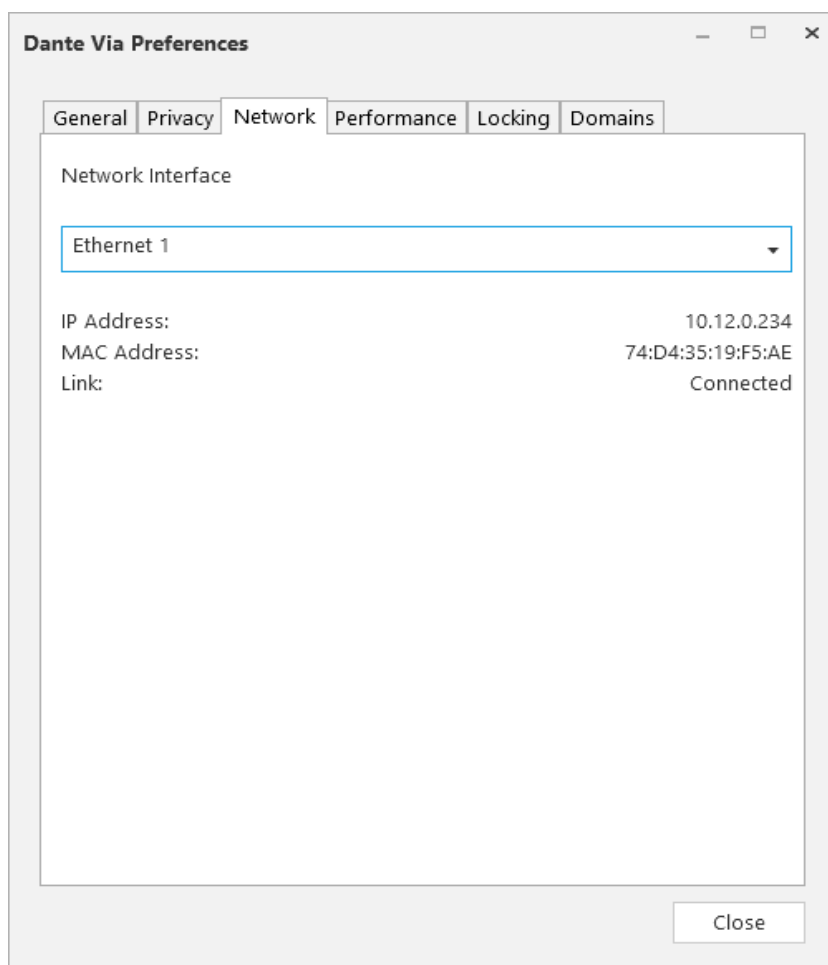


Network Interface

Use the Network Interface menu to select the physical Ethernet interface that Dante Via will use to connect to the local area network.



Note: The network interface used by Dante Via can be changed by other Dante applications, such as Dante Controller and Dante Virtual Soundcard.

Performance Preferences (Windows only)

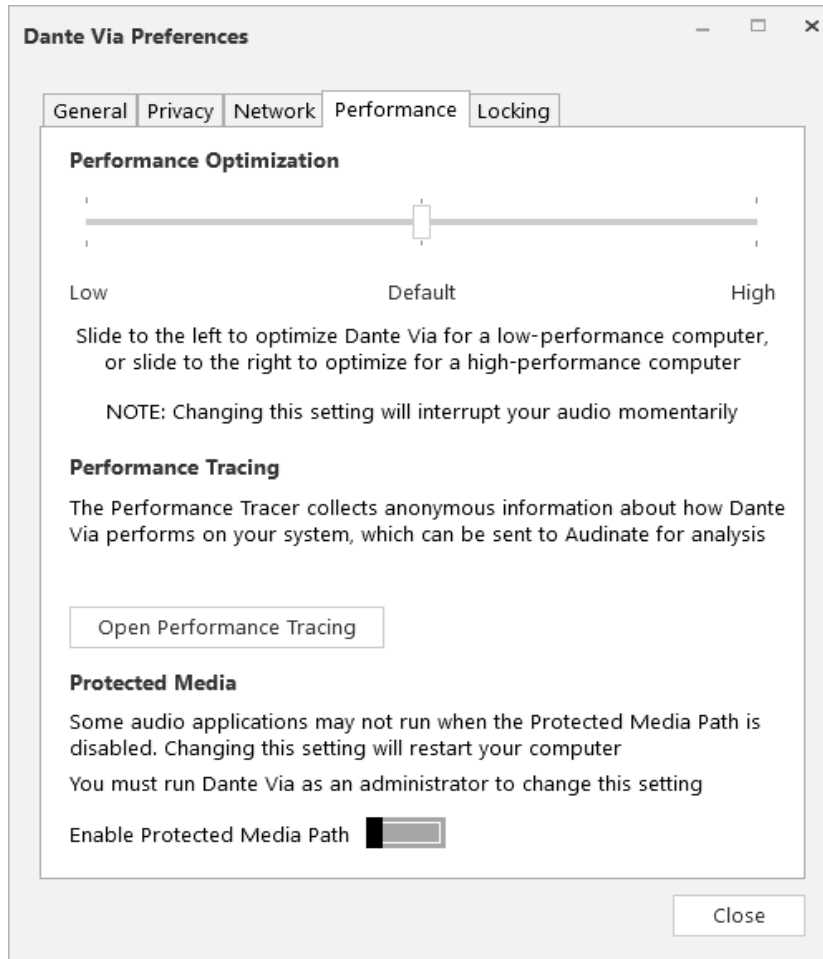

Performance Optimization


Use this control to optimize Dante Via for your computer.

- Low: Use this setting if you are experiencing audio drop-outs or distortion.
- Default: This setting is suitable for most standard-use computers.
- High: Use this setting if you have a computer which is specifically tuned for audio and you require the lowest possible latency. If this setting causes audio problems, revert to default.

Performance Tracing

The Performance Tracer collects anonymous information about how Dante Via performs on your computer. You should only use this feature if you have been asked to by Audinate Technical Support.

Protected Media

Dante Via disables the Windows [protected media path](#)  when it is installed. The protected media path creates a secure environment for DRM (Digital Rights Management) content.


Use this control to enable protected media support for applications that require it (for example, video streaming apps such as the Netflix® Windows app). You must run Dante Via as an administrator in order to enable / disable protected media path.

See [this troubleshooting topic](#) for more information.



Note: Enabling the protected media path prevents the discovery of WDM applications. ASIO applications are unaffected.

Locking Preferences

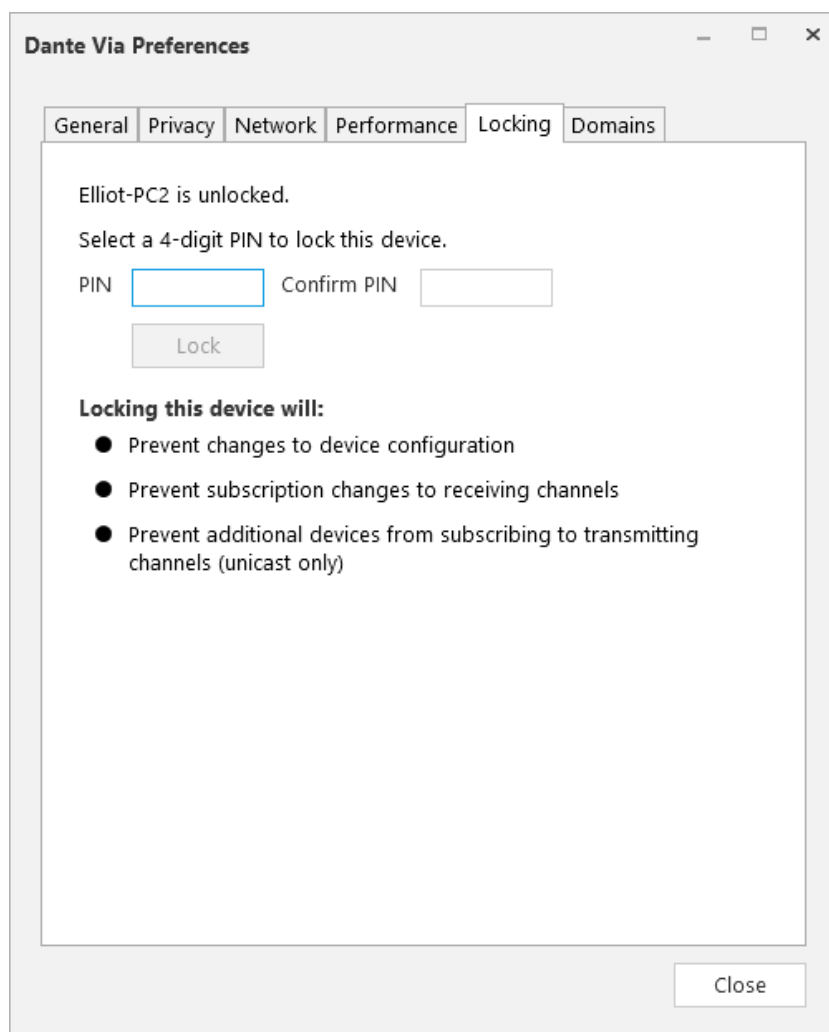

The screenshot shows the 'Dante Via Preferences' dialog box with the 'Locking' tab selected. The dialog has a title bar with standard Windows window controls. Below the title bar are six tabs: 'General', 'Privacy', 'Network', 'Performance', 'Locking', and 'Domains'. The 'Locking' tab is active, displaying the following content:

Elliot-PC2 is unlocked.

Select a 4-digit PIN to lock this device.

PIN Confirm PIN

Locking this device will:

- Prevent changes to device configuration
- Prevent subscription changes to receiving channels
- Prevent additional devices from subscribing to transmitting channels (unicast only)

Use the Locking tab to lock and unlock Dante Via.

Locking Dante Via prevents accidental changes to audio routing, and prevents remote users from changing the routing configuration with Dante Controller.

When Dante Via is locked, the main UI becomes read-only - however, the Mute All button, Stop / Start button and main menus are still enabled. In the preferences, all controls are disabled except the 'check for updates' controls, the performance tracing feature and the Unlock button.

You can lock and unlock Dante Via locally using the UI, or remotely using Dante Controller.

To lock Dante Via using the UI:

1. Navigate to the main menu > Preferences.
2. Select the Locking tab.
3. In the PIN field, enter a 4-digit PIN.
4. In the Confirm PIN field, enter the same PIN.
5. Click **Lock**.


A lock icon is displayed in the main UI which can be used to open the preferences at the Locking tab.

To unlock Dante Via using the UI:

1. Click the lock icon, or go to the main menu > Preferences and select the Locking tab.
2. Click **Unlock**.

For information about using Dante Controller to lock and unlock Dante Via, see the [Dante Controller user guide](#).

Domains Preferences

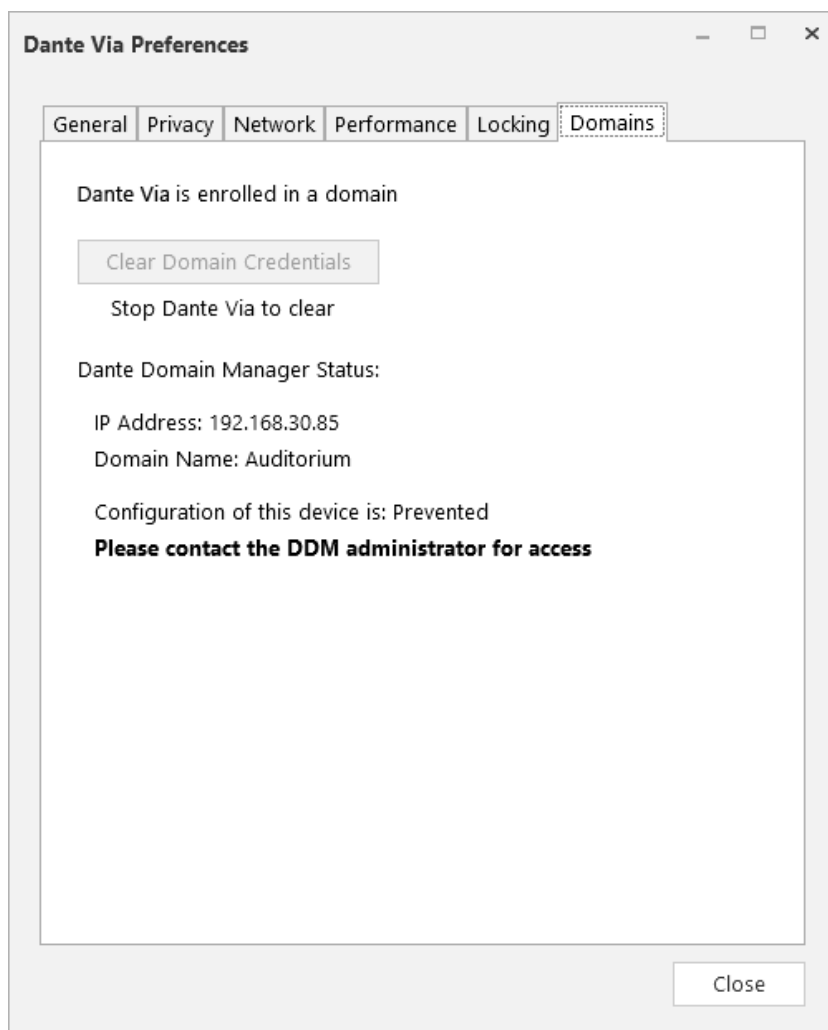

Clear Domain Credentials

When Dante Via is enrolled in a Dante domain, it stores 'domain credentials' (enrollment information) for the relevant DDM server and domain, and the user interface may be locked (depending on the controller permissions configured in Dante Domain Manager). When Dante Via is unenrolled, it returns to the unmanaged domain, the domain credentials are automatically cleared and the user interface is unlocked.

If the Dante Via computer is moved out of the DDM network to another network without Dante Via first being unenrolled, the user interface will remain locked, due to the presence of the stored domain credentials. In these circumstances it is necessary to clear its domain credentials manually so that the user interface becomes unlocked.

To clear domain credentials, stop Dante Via and click **Clear Domain Credentials**.



Note: If you clear domain credentials when Dante Via is still connected to the DDM server and enrolled in a domain, DDM will report Dante Via as offline. To clear this condition, use the 'Forget' function in DDM.

DDM Controller Permissions for Dante Via

In DDM you can specify the following controller permissions for Dante Via, which define its behavior when enrolled in a domain.

Configuration of This Device

- **Allow**

The Dante Via user interface is fully operational.

- **Prevent**

The Dante Via user interface is locked.

Dante Network Role

- **None**

Dante Via does not display remote Dante devices.

- **Guest**

Dante Via displays remote Dante devices and audio routing to/from those devices is allowed.



Note: For Dante Controller users logged into DDM, routing permissions to/from Dante Via are defined by the user's DDM role, not by the Dante Network Role configured for Dante Via.

Using Dante Via

Configuring Your Computer

When Dante Via is running, your computer will automatically switch to using Dante Via as the default audio 'device'. When Dante Via is not running, your computer will revert back to the audio device that was set as default in your operating system before Dante Via was installed (for example, the built-in soundcard).

If Dante Via is not the default audio device for your computer, the following icon will be displayed:



If you see this icon, in order to use Dante Via for audio, you will need to manually set Dante Via as the default audio device for your computer. Once set, your computer will remember the setting, and use Dante Via whenever it is running.

Manually Setting Dante Via as the Default Audio Interface

If your computer does not automatically switch to using Dante Via as the default audio device, you can configure it manually.

macOS

1. Open the System Preferences.
2. Click Sound.
3. In the [Output tab](#), select [Dante Via](#).
4. In the Input tab, select Dante Via.
5. Close the Sound preferences dialogue.

Windows

1. Open the Windows Control Panel.
2. Select Hardware and Sound.
3. Under 'Sound', click Manage audio devices.
4. In the [Playback tab](#), select [Dante Via Transmit](#) and click 'Set Default' (or right-click > Set as Default Device).
5. In the Receive tab, select Dante Via Receive and click 'Set Default' (or right-click > Set as Default Device).
6. Click OK.


Will my audio routing change when I install Dante Via?

When it is first run, Dante Via will send your system sounds (operating system error sounds, email notifications etc.) and also any running audio-capable software applications that it finds to the [default output device](#), which is typically the device you were using for audio before you installed Dante Via - so for most systems, you should notice no immediate change in your audio routing setup when you install and run Dante Via.

You can change the default output device in the [general preferences](#). It will also send newly-discovered software applications to that device.

Network Connection

Dante Via requires that your computer is physically connected to an Ethernet network (Wi-Fi is not supported).

If your computer is not physically connected to an Ethernet network, Dante Via will display the following icon in the user interface: 

Multiple network connections

To prevent audio transport problems, you should only have ONE active wired network connection to your Dante network while Dante Via is running.

If Dante Via detects more than one active wired connection to your Dante network, it will display the following icon:



Hover over the icon for more information.

Troubleshooting Volume Issues

If Dante Via is running and set as the default device, but you cannot hear audio, it may be because Dante Via is muted or turned down in the computer's audio preferences.

To open the audio mixer in Windows, [click the speaker icon in your system tray and select 'Mixer'](#).

To adjust volume controls in macOS, open System Preferences and click Sound.

Switching Computer Accounts



Important: Switching computer accounts (logging off and logging back onto the computer as a different user) will not necessarily reset audio routing for that computer (behavior will vary between operating systems).

This means that another user logging onto your computer may have audio routing in place that they are not aware of. On shared computers, you should always clear your audio routing before logging off, to prevent privacy issues for other users.

Stopping and Starting Dante Via


To stop or restart Dante Via, use the button at the top of the main user interface, or the button in the [General tab of the Preferences window](#).

Connecting Sources to Destinations

Connecting Sources to 'Idle' Destinations

Idle destinations are destinations that are not currently receiving any source.


They show no sources in the 'Now Receiving' field:

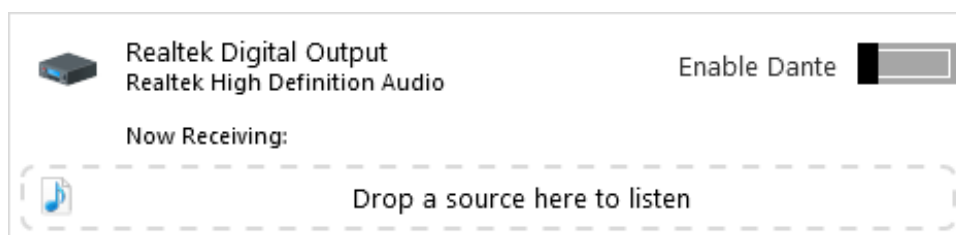


To send a source to an idle destination, simply drag the source onto the destination. This creates a 'subscription'.

The source will appear in the 'Now Receiving' field for the destination.

In the example below, the [default device](#) (a USB headset) is receiving audio from ('subscribed to') the Skype application.

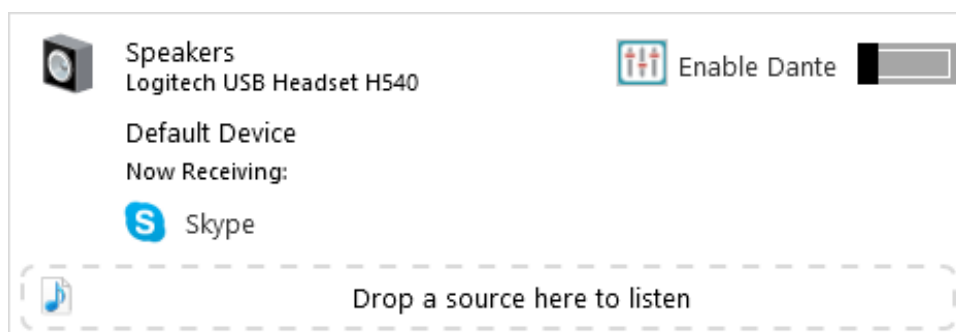

 **Note:** Sources can be sent to multiple destinations.


Connecting Sources to 'Subscribed' Destinations

Subscribed destinations are destinations which are actively receiving one or more sources.

When you drag a source to a subscribed destination, the available subscription options depend on whether the source is stereo (2 channels) or multichannel (more than 2 channels). Consumer-level audio applications and devices are often stereo, and professional audio applications and devices are often multichannel.

Stereo Destinations


When you drag a source to a stereo subscribed destination, you can 'Add Source to Mix', or 'Replace Mix with Source'.

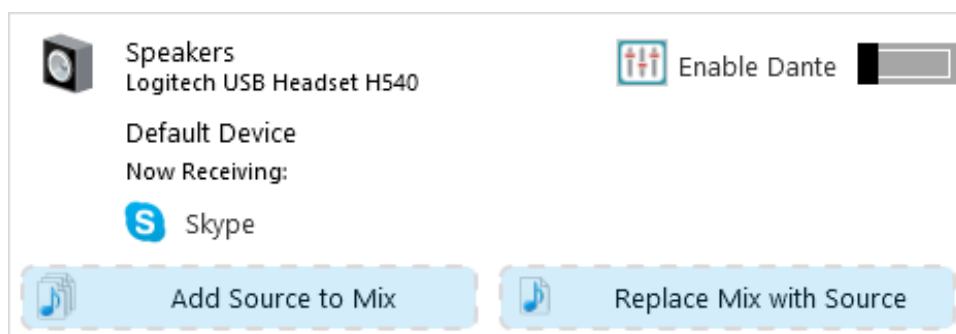

Add Source to Mix

When you 'Add Source to Mix', the source will be added to the source that was already playing, automatically creating a mix.

In the example below, the default device is receiving an audio mix of Skype and Chrome (visually indicated by the vertical arrangement of the sources).

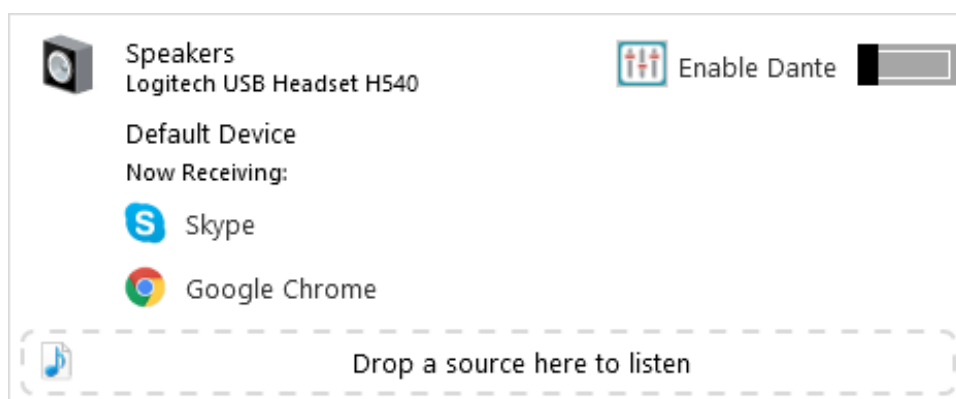

Use the [volume mixer](#) to adjust the volumes of the individual sources.


■ [How this subscription appears in Dante Controller](#)

Replace Mix with Source

When you 'Replace Mix with Source', the new source will fully replace whatever was previously playing to that destination.

Multichannel Destinations


When you drag a source to a multichannel subscribed destination, you can 'Append Source to Destination channels', or 'Replace existing subscription'.

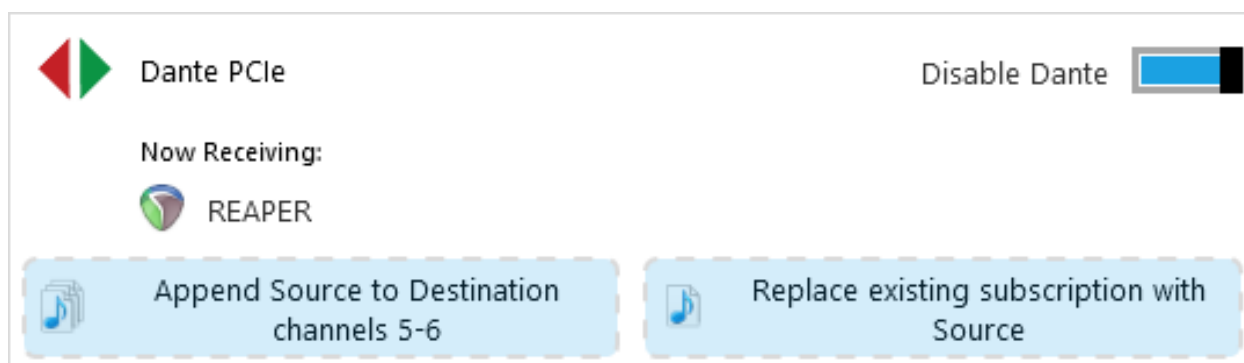

Append Source to Destination Channels


When you 'Append Source to Destination channels [x]', the new source's channels will be appended to the channels that are already playing to that destination. The channel numbers displayed in the 'Append Source...' field are the destination channels that will be subscribed to the new source.

For example, if a PCIe card destination is receiving 8 channels of Reaper, and you drag a 2-channel hardware soundcard to the 'Append Source...' field, channels 1-8 of the PCIe card will remain subscribed to Reaper, and channels 9 and 10 of the PCIe card will be subscribed to the hardware soundcard.

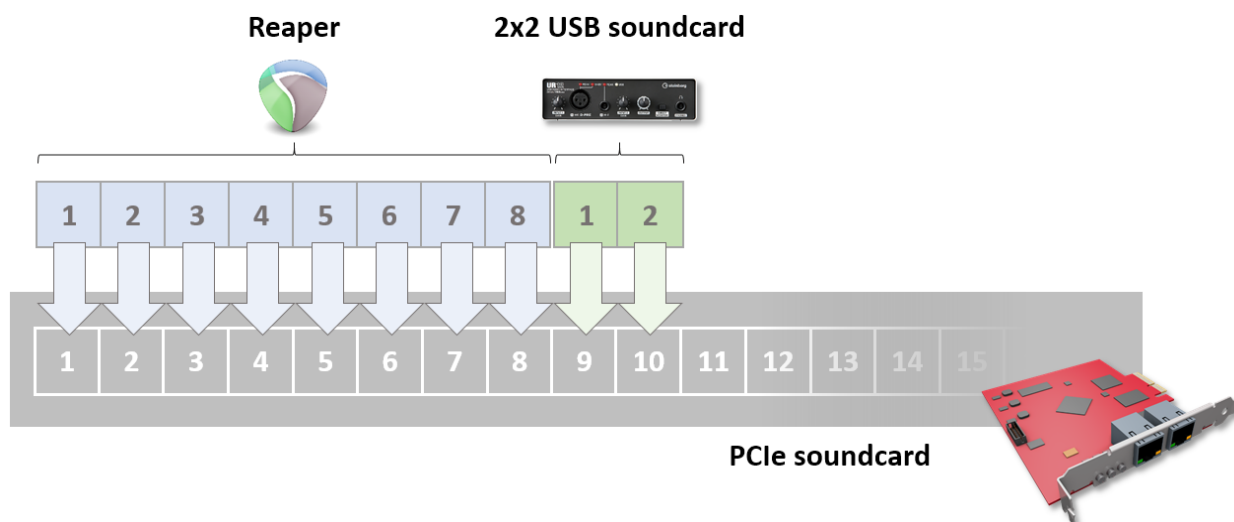

Any further sources subscribed to the destination in this way will be appended after the most recently-added source. If the destination does not have enough free channels to fully accommodate the new source (for example, if the source has eight channels but there are only four destination channels free), as many channels as possible will be subscribed.

For multichannel subscriptions, the sources are displayed horizontally:

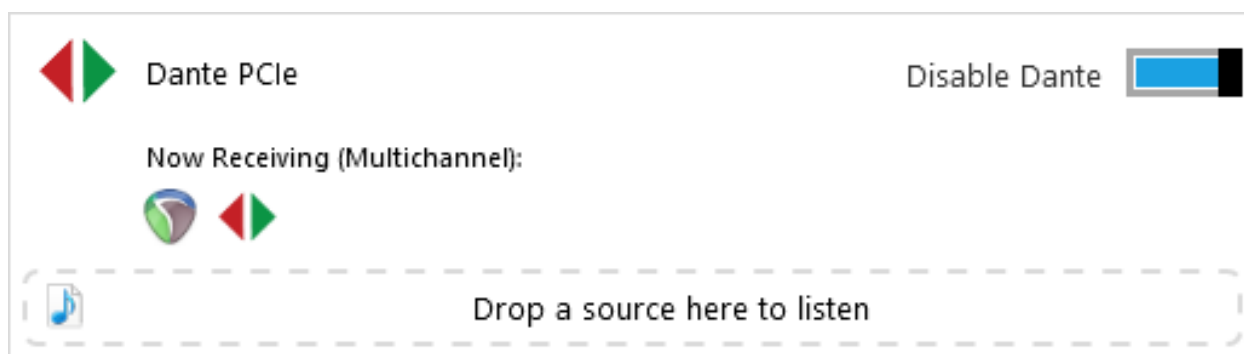

Hover over a source to display the source name.

■ [How this subscription appears in Dante Controller](#)

i Note: You cannot remove individual sources from a multichannel subscription using Dante Via - you must remove all sources simultaneously. You can however use Dante Controller to make specific adjustments to channel subscriptions.

Replace Existing Subscription with Source

When you 'Replace existing subscription with Source', the new source will fully replace whatever was previously playing to that destination.

Inactive Sources

If a source is assigned to a destination but is not running (for example, if the application was closed, or the device disconnected) it will appear grayed out, in italic font:

Default Device


Now Receiving :



When the source is restarted, it will resume playing audio to the destination.

Removing Sources from Destinations

To remove a source from a destination, hover over the source icon in the 'Now receiving' area for the destination, and click the red **x** icon.

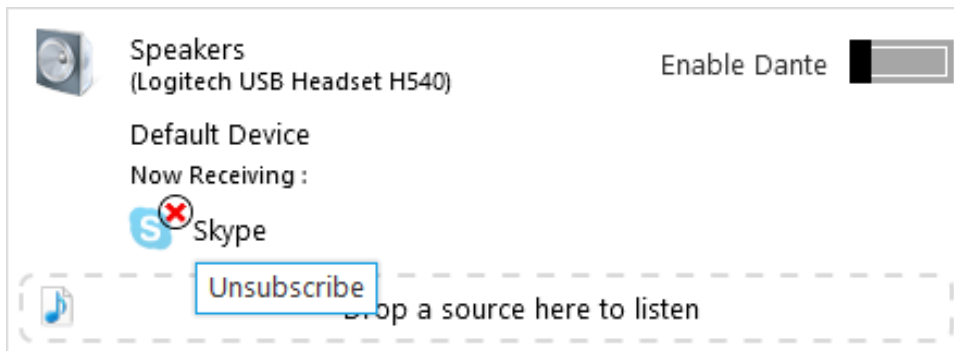


Muting Sources in the All Applications Mix

If no sources have been specifically sent to the default device (or when previous sources have been removed), it plays the [all applications mix](#).

When the all applications mix is playing to the default device, sources cannot be removed, they can only be muted.

To mute sources in the all applications mix, hover over the source icon in the 'Now receiving' area for the default output destination, and click the speaker icon.

To un-mute a source, click the speaker icon again.

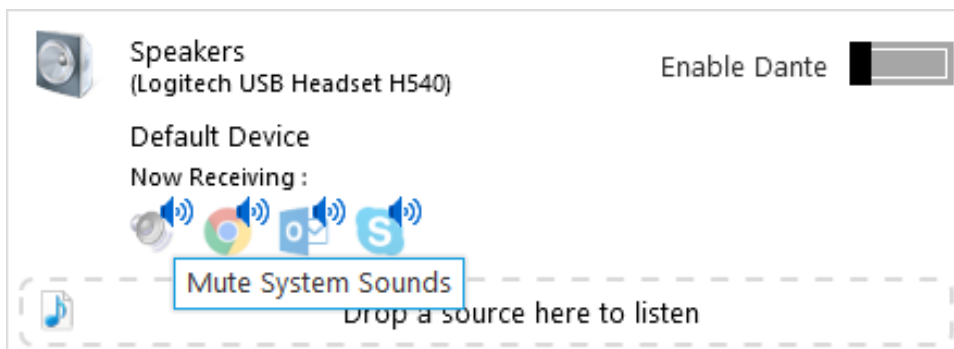

Removing Listeners from your Sources

Listeners are other network users who have routed one of your shared sources to one of their destinations.

There are 3 ways to remove a listener from one of your sources:

- Disable the 'Enable Dante' control for the source - this takes it off the Dante network.
- Use Dante Controller to unsubscribe the receiver from your source.
- Click 'Clear Permissions' in the [Privacy Preferences](#) (this revokes all previously-granted permissions).



Note: Using the first two methods, the listener will be able to reconnect to the source (assuming it is back on the network) without your permission, unless you revoke their permission using the 'Clear Permissions' button in the privacy preferences.

Sending Audio to Software Applications

Dante Via supports up to 16 channels of audio for software applications.

In macOS

In macOS, software destinations, such as recording applications, aren't ever visible in the Dante Via UI.

To send sources to software applications in macOS, you must send them to the Stereo Application Input, or the 16 Channel Application Input, and then configure the application to use 'Dante Via Stereo' or 'Dante Via 16 Channel' as the recording / input interface.

With 'Enable Dante' selected, the application inputs present as receive and transmit channels (named 'Stereo Application Input' and '16 Ch Application Input') in Dante Controller.



Note: The Stereo Application Input transmit channels visible in Dante Controller are used to provide the 'all running applications mix' (including system sounds) to the default output. The all running applications mix can be filtered by muting individual applications.

The receive channels will show a subscription present if a source is playing to one of the application inputs (but the source itself will not necessarily appear as transmit channels).

In Windows

In Windows, sources can be sent directly to software destinations, by dragging and dropping the source onto the destination. You can also use Dante Controller to directly subscribe a destination to a source.

See [Software Application Visibility](#) for information about application visibility in Dante Via.

Built-in Inputs and Outputs

In macOS

In macOS, the 'Built-in Input' in the Sources list is typically the standard microphone jack built into the computer case.

The 'Built-in Output' in the Destinations list is typically the standard headphone jack built into the case.



Note: In macOS 10.15, you will need to [give Dante Via permission to route audio from audio input devices](#).


In Windows

In Windows, hardware soundcards that are installed in the computer are referred to by their brand or model names. For example, if you have a Realtek® digital soundcard installed in your computer, it may appear as 'Realtek Digital Input' in the Sources list, and as 'Realtek Digital Output' in the Destinations list.

Audio Routing Permission in macOS 10.15 and Up


In macOS 10.15 and up, you will need to give Dante Via permission to route audio from audio input devices.


When Dante Via first loads or accesses an audio input device, a pop-up dialog will be displayed:

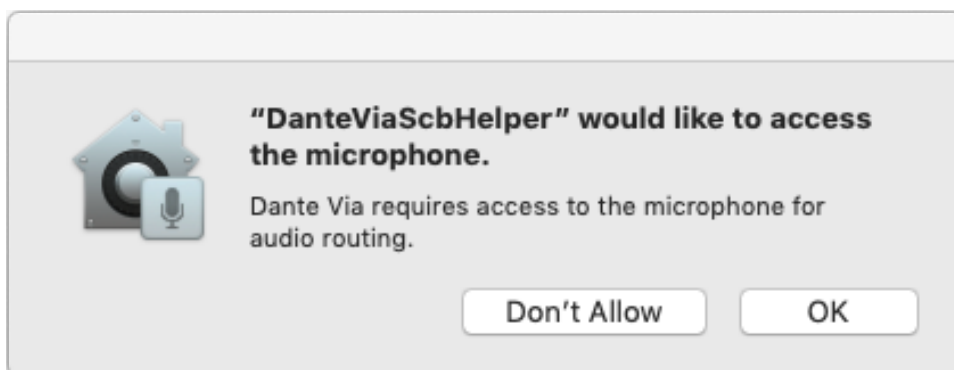

Click **OK** to allow Dante Via to access the device.

You can control the permission setting at any time in the macOS Security and Privacy settings:

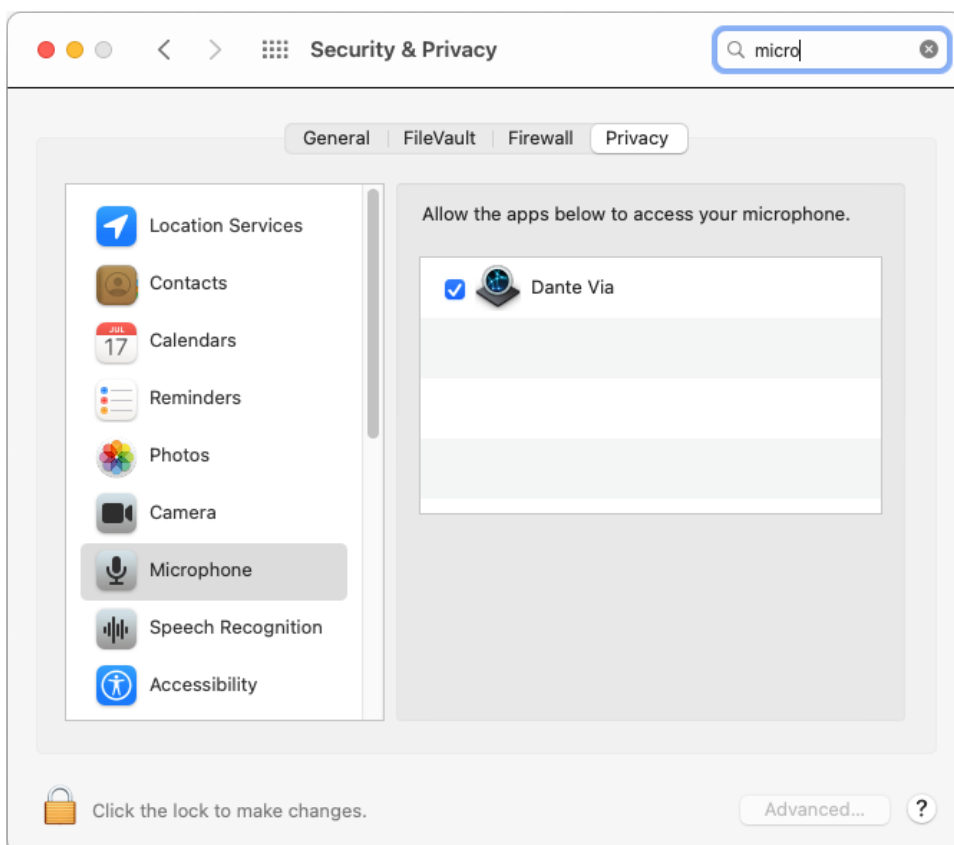

 **Note:** 'Microphone' applies to all types of audio input device.

Default Devices

Default Devices are set in the [General tab of the Preferences panel](#).

Default Output Device

The Default Output Device is the local hardware device to which Dante Via will by default send all stereo audio applications (and in the case of Windows, any multichannel applications that are configured to use WDM drivers) assuming no other sources have been specifically sent to that device.

The mix of sources that plays to the default output device is called the '[all applications mix](#)'.

Sending any source to the default output device will fully replace the all applications mix.



Note: When Dante Via is first run, it sets its default output device to the device that is set as default in your operating system audio settings.

System Sounds

Dante Via will also send your system sounds to the default output device, as part of the all applications mix (assuming no other sources have been specifically sent to that device).

System sounds includes audio such as operating system event notifications, and email client notifications.

The system sounds mix is identified by a speaker icon in Windows  or the Finder icon in macOS .

If you set your default output device to 'None', the system sounds will not play to any destinations.

Default Input Device (Windows only)

In Windows, you can also set a default input device.

The Default Input Device is the local hardware device which Dante Via will assign to all stereo 'recording applications' (i.e. software applications that can receive audio).

When Dante Via is first run, it sets its default input device to the device that is set as default in your Windows audio settings.


All Applications Mix


The 'all applications mix' is a mix created automatically by Dante Via containing all software applications (except for ASIO applications in Windows). The all applications mix is automatically sent to the default output device.

If a specific source is sent to the default output device instead, it fully replaces the all applications mix. If that source is then removed, the default output device reverts back to playing the all applications mix.

To mute individual sources in the all applications mix:

1. In the default output device destination, hover over the source you want to mute.
2. Click the mute icon.

 **Note:** The [volume mixer](#) is not enabled for the all applications mix.


 **Note:** You can tell if a destination is playing the all applications mix by the presence of the system sounds icon.

Software Application Visibility

Windows

In Windows, software applications will not initially appear in the Local Applications areas until they are either actively playing audio (sources), or actively recording or receiving audio (destinations). Once they have been discovered, they will appear whenever they are running.

Some applications (such as Skype) may also require that you select Dante Via as the default device(s) before they appear in Dante Via.

 **Note:** It is recommended that you start audio applications *after* starting Dante Via.

If when you start Dante Via a running audio application is not visible in the Dante Via UI, quit and then restart the audio application. You may also have to play or record audio using the application before it appears in Dante Via.

macOS

In macOS, software applications must be actively playing to be initially discovered by Dante Via. Once they have been discovered, they will appear whenever they are running.


Exposing Sources and Destinations to the Dante network

To expose a source or destination to the Dante network, click the 'Enable Dante' control (a slider in Windows, and a checkbox in macOS).

 **Note:** Enabling Dante uses [resources](#).

Exposing Sources

When you expose a source to the Dante network, other Dante Via users on the network can send the audio to their own destinations, using Dante Via, or Dante Controller (see [Using Dante Controller to Route Audio](#)).

 **Note:** A Dante Via resource must be set to 'Enable Dante' in order for it to appear in Dante Controller. Dante Via resources appear nested under the host computer name in Dante Controller.

When a user first tries to connect to one of your sources, you will be presented with a pop-up dialogue asking you to allow or deny the connection.

See [Privacy and Permissions](#) for more information.

When a destination successfully connects to one of your sources, it appears in the 'Listeners' field for the source. To stop the destination listening to your source, disable 'Enable Dante'.

Exposing Destinations

Exposing a destination to the Dante network allows you to send audio to it from a network source.

A network source can be:

- An application or audio device installed on another computer running Dante Via
- A physical device connected to a computer running Dante Via
- A remote Dante-enabled device



Note: Connecting a network source to one of your destinations will automatically expose the destination to the Dante network.


Using Dante Controller to Route Audio

All sources and destinations that are exposed to the Dante network become visible in Dante Controller.

Remote Dante-enabled devices (i.e. devices connected to a network switch, but not to a computer) appear as discrete devices, whereas software applications and audio-capable hardware peripherals appear as transmit and/or receive channels for the computer that they are installed on or connected to.


Routing audio between Dante Via resources in Dante Controller is done in the same way as audio routing for Dante-enabled devices. See the [Dante Controller](#) user guide for more information.

To launch Dante Controller from the Dante Via user interface, click the 'Open Dante Controller' button in the Network section.

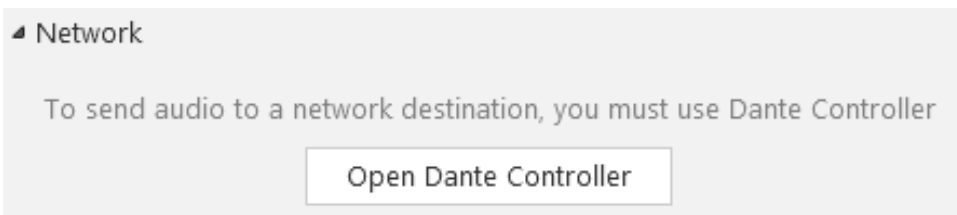

Privacy and Permissions

By default, Dante Via will not allow another users to connect to one of your Dante-enabled sources without your permission. When another user first tries to connect to one of your sources, you'll be presented with an 'Access Control Request' pop-up dialog asking you to allow or deny the connection.

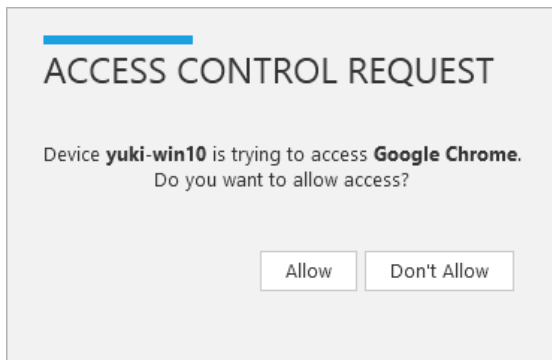


- If you click 'Allow', the connection will be completed, and the user will receive audio from your source.
- If you click 'Don't Allow', the connection will be rejected, and the user will not receive any audio from your source.

Permissions are persistent across sessions: If you allow a connection for any user, they will be able to connect to the same source as many times as they like, even if Dante Via and/or either computer is stopped and restarted.

To revoke all existing permissions, go to Preferences > Privacy, and click 'Clear Permissions'. This will mean that any new connections (even previously allowed connections) will require your permission, and any existing connections will require permission to be re-granted.

Mute All

 Click the Mute All button to mute audio from all your sources, and mute audio to all your receivers.



Click it again to un-mute all audio.

Channel Mapping

Most consumer audio applications are stereo, with two channels of audio - left and right. When Dante Via pipes audio between applications, by default it connects left outputs to left inputs, and right outputs to right inputs.

For applications and hardware devices with more than two channels, Dante Via connects channels sequentially - 1 to 1, 2 to 2, 3 to 3 and so on. More specific channel routing can then be done using Dante Controller if required.

In Windows, multichannel WDM devices may present as groups of stereo pairs - for example, a WDM soundcard that presents 8 channels to Windows will typically appear in Dante Via as 4 stereo pairs.

[Example](#)

Audio Format

Dante Via's native audio format is 24-bit audio at 48 kHz sample rate.

For locally-connected devices, Dante Via converts incoming audio 48 kHz, and converts outgoing audio to match the sample rate required by the destination device.

To be supported by Dante Via, networked Dante-enabled hardware devices must be set to 48 kHz (with no sample rate pull-up).

Latency

Dante Via's base latency is ~10 milliseconds.

However, auxiliary devices such as locally-connected USB peripherals may also introduce their own latency.

For more information about latency, see the Dante Controller user guide.

Dante Virtual Soundcard

Dante Via and Dante Virtual Soundcard cannot be used at the same time.

To use Dante Virtual Soundcard, you must first [stop Dante Via](#), and vice-versa.

Dante Domain Manager


Dante Domain Manager (DDM) is network management software that enables user authentication, role-based security and audit capabilities for Dante networks, while allowing seamless expansion of Dante systems over any network infrastructure.

The Dante Via application presents in DDM in the same way as hardware Dante devices, taking its name from the name of the computer on which it is installed, with a device type of Dante Via.

When Dante Via is enrolled, a domain icon is displayed in the toolbar next to the mute, start/stop and preferences buttons:



Depending on configuration settings made by the domain administrator in DDM, when Dante Via is enrolled its user interface may become locked:

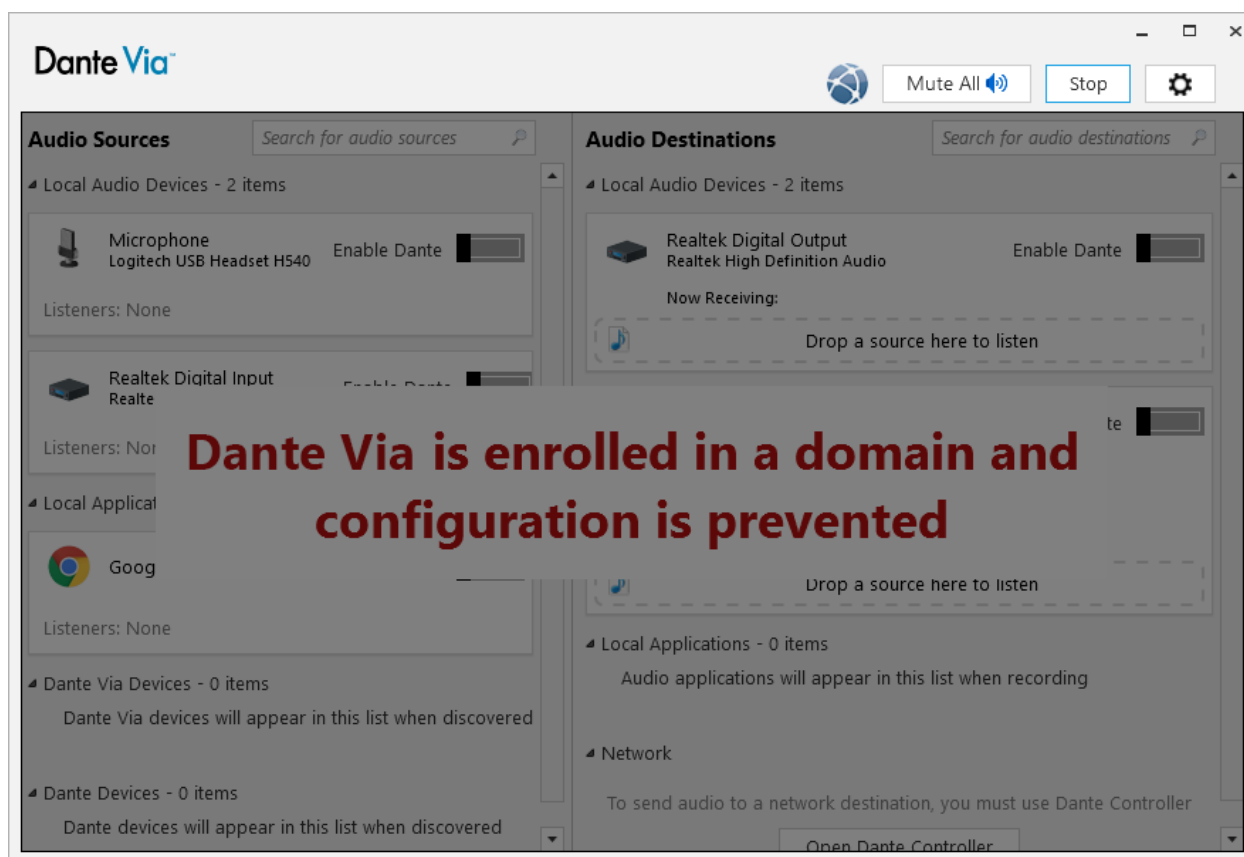

Further settings affect the visibility of remote devices in the Dante Via interface.

If the DDM server goes offline or becomes unreachable while Dante Via is enrolled, the following icon will be displayed in the Dante Via toolbar:



Refer to [Domains Preferences](#) for more information.

Troubleshooting

Licensing and Activation

I don't have a license key


Usually, you shouldn't need a license key - if you bought Dante Via through the Audinate website (www.audinate.com), you can activate Dante Via using your audinate.com registered email address and password. When you first start the application, just click 'Log in with Audinate.com account' and then enter your audinate.com credentials.

If you didn't buy Dante Via through the Audinate website, you should have been provided with a license key by your supplier.

I activated Dante Via but the user interface is empty



This usually indicates that Dante Via is not activated. Use the Activation panel to activate Dante Via.

- To open the Activation panel in Windows, click the gear icon  to open the main menu, and select Activation.
- To open the Activation panel in macOS, go to the Dante Via menu > Activation.

If Dante Via is activated but the user interface is still empty, double-check that Dante Via is actually running. When it is running, there will be a button at the top of the user interface labeled 'Stop'. If it's labeled 'Start', Dante Via is not currently running. You can also check in the general preferences.

Dante Via won't run (Windows)

Dante Via requires Microsoft .NET framework v4.5.1 or above - [check if you have the required version](#), and update it if required (you can use Windows Update to update your .NET version).

Audio Problems - First Things to Check

- Check that Dante Via is actually running. When it is running, there will be a button at the top of the user interface labeled 'Stop'. And yes you've guessed it - if it's labeled 'Start', Dante Via is not currently running. You can also check in the general preferences.

- Check that Dante Via is selected as the default device (and in Windows, also as the default communication device) in your operating system's audio settings ('Playback devices' and 'Recording devices' in Windows, and 'Sound Preferences' in macOS).
- Check that the Dante Via volume in the Volume Mixer (Windows) or the Sound Preferences (macOS) is not turned right down.
- Check that your default output device (set in the Dante Via General Preferences) is capable of producing audio, and its volume is not turned right down or muted.
- For Windows installations, check that the Dante Via audio device driver is installed and enabled.

If there is a problem with the device driver, you should see the following icon at the top right of the user interface:



Hovering over the icon will display text indicating that the input, output or both devices are not enabled.

See [Checking That the Dante Via Sound Device is Enabled in Windows](#) for more information.

Note: This icon can also indicate that Dante Via is not set as the default audio device for your computer (see [User Interface Notifications](#) for more information).



Sources Not Appearing

General

Are you sure what you're looking for is a source, and not a destination? Look for it in the Destinations panel.

Sources produce audio - they add audio to the computer / Dante network. Destinations receive audio from the computer / Dante network. Some devices and applications are sources and also destinations. [More info](#)

Locally-connected Hardware Sources (Local Audio Devices) Not Appearing



Windows

Local hardware sources should appear as soon as they are connected to the computer.

Troubleshooting steps

1. Make sure it's switched on!
2. Check the cable.
3. Physically disconnect and reconnect the device.
4. Make sure the latest drivers for the device are installed (usually can be downloaded from the manufacturer's website).
5. Make sure the device is properly enabled in Windows (Device Manager).
6. For USB devices, make sure the USB port is working (try connecting something else to it).
7. Try setting it to 48 kHz sample rate (the native sample rate for Dante Via).
8. In Windows Device Manager, scan for hardware changes (this may rediscover any malfunctioning USB devices).
9. As a last resort, unplug the device, uninstall the USB port (using Windows Device Manager), then restart your PC - this will discover and re-enable any uninstalled USB ports.

macOS

Troubleshooting steps

1. Make sure it's switched on.
2. Check the cable.
3. Physically disconnect and reconnect the device.
4. Make sure the latest drivers for the device are installed (usually can be downloaded from the manufacturer's website).
5. Make sure the device appears in Utilities > Audio MIDI Setup.
6. For USB devices, make sure the USB port is working (try connecting something else to it).
7. Try setting it to 48 kHz sample rate (the native sample rate for Dante Via).

Software Sources (Local Applications) Not Appearing



Software sources will not usually appear in the Dante Via interface until they are actively playing audio.

Troubleshooting

1. Play some audio using the application and check Via to see if it has appeared. If not: Close the audio application.
2. Stop Dante Via (using the 'Stop' button).
3. Close the Via application.
4. Re-open Dante Via.
5. Restart Dante Via.
6. Restart the audio application.
7. Play some audio in the audio application.

Windows only: WDM applications not appearing

If Protected Media Path is enabled, WDM (Windows audio) applications do not appear in Dante Via.
ASIO applications are unaffected.

Audio sources on other Dante Via-installed computers (Via Devices) Not Appearing

Windows and macOS

Audio sources on other Dante Via-installed computers appear under the host computer name, if they are shared ('Enable Dante' is selected) on the host computer.

If a computer appears in the Via Devices list, but there are no sources listed under it (and the arrow is pointing down and to the right ▾ there are currently no shared sources on that computer.

Troubleshooting

- Ask the owner of the host computer to 'Enable Dante' for the source.

Networked Dante-enabled Hardware Sources (Dante Devices) Not Appearing

Windows and macOS

Dante devices (remote Dante devices that are not directly connected to a computer - such as mixing consoles and amplifiers) will only appear in Dante Via if they are set to 48 kHz sample rate (with no sample rate pull-up).

Troubleshooting

- Ensure the device is set to 48 kHz sample rate, with no sample rate pull-up.

Destinations Not Appearing

General

Are you sure what you're looking for is a destination, and not a source? Look for it in the Sources panel.

Destinations receive audio from the computer / Dante network. Sources produce audio - they add audio to the computer / Dante network. Some devices and applications are sources and also destinations. [More info](#)

Locally-connected Hardware Destinations (Local Audio Devices) Not Appearing

Windows and macOS

Local hardware destinations should appear as soon as they are connected to the computer.

For troubleshooting steps, see [Locally-connected Hardware Sources \(Local Audio Devices\) Not Appearing](#).

Software Destinations (Local Applications) Not Appearing

Windows

Software destinations will not usually appear in the Dante Via interface until they are actively recording or receiving audio.

Troubleshooting

1. Close the audio application.
2. Stop Dante Via (using the 'Stop' button).
3. Close the Dante Via application.
4. Re-open Dante Via.
5. Restart Dante Via (using the 'Start' button).
6. Restart the audio application.
7. Record some audio in the audio application.

macOS

In macOS, software destinations do not appear in the Audio Destinations panel. To send audio to a software destination, you must send the source to the [Stereo Application Input](#) or the 16 Channel Application Input, and configure the application to use Dante Via as its audio interface.

Distorted Audio

Windows

Audio distortion can occur for a variety of reasons, including:

- Unstable device drivers
- Overloaded network links
- Overloaded CPU
- Particular software and/or hardware configurations

In the case of audio distortion on Windows:

1. Disable any Wi-Fi network connections.
2. Check that any network switches in the system are coping with their traffic.
3. Check the Performance tab in Windows Task Manager to see if your CPU is overloaded during Dante Via operation.
4. Check that your device drivers are at the latest versions.
5. Stop any unnecessary software processes.
6. In Dante Via, go to Preferences > Performance tab, and slide the slider to the far left.
7. Tune your PC for audio (check [this FAQ](#) for more information).


Absence of Audio

Absence of Audio from Locally-connected Hardware Sources (Local Audio Devices)

1. Check that the device is actually routed to a destination.
2. Check that the destination is configured to use Dante Via as its input interface.
3. Check that the device is producing audio (for example, using a built-in headphone jack).
4. Check that the destination is capable of receiving and/or playing audio.
5. Check that the Dante Via volume in the Volume Mixer (Windows) or the Sound Preferences (macOS) is not turned right down.
6. In Dante Controller, check for signal presence in the Transmit tab for the device and the Receive tab for the destination.
7. Disconnect and reconnect the device. For USB devices, try a different USB port.
8. Route the device to a different destination, to rule out problems with the original destination.

Absence of Audio from Software Sources (Local Applications)

1. Check that the application is actually producing audio.
2. Check that the Dante Via volume in the Volume Mixer (Windows) or the Sound Preferences (macOS) is not turned right down.
3. If the application isn't routed anywhere in particular, it should be playing to your default output (general preferences tab); check that the default output is physically able to play audio (check physical volume controls, power, connectivity).
4. If the application is routed to a specific destination, check that the destination is configured to use Dante Via as its input interface.
5. Check that the source is configured to use Dante Via as its output interface (note that Skype can automatically change its audio interface settings quite often, particularly when audio hardware is connected to or disconnected from the computer).
6. Check volume controls and other audio settings in the source and destination applications.
7. In Dante Controller, check for signal presence in the Transmit tab for the source and the Receive tab for the destination.
8. In Windows, check that the Dante Via sound device is present and enabled in the Sound Settings and Device Manager. See [Checking That the Dante Via Sound Device is Enabled in Windows](#) for more information.
9. If all else fails, stop the application(s), stop Dante Via (using the 'Stop' button), close and re-open the Dante Via UI, restart Dante Via, and restart the application(s).

 **Note:** In Windows, some applications require 'protected media' support, for example video streaming applications such as the Netflix Windows application. If you cannot hear audio from a streaming application, try enabling the Protected Media Path in the ['Performance' preferences tab](#).


Absence of Audio from Other Computers (Via Devices)

Access Control

If audio from another computer (Via Device) is not heard when routed to one of your own destinations, check that the owner of the computer has approved any Access Control Requests ('Device X is trying to access ...').

Absence of Audio from Networked Dante-enabled Hardware Sources (Dante Devices)

See ['Absence of audio from locally-connected hardware sources \(Local Audio Devices\)'](#).

 **Note:** Dante devices need to be set to 48 kHz sample rate (with no pull-up) to appear in Dante Via.

Video streaming apps don't work anymore (Windows)

On Windows, Dante Via disables by default the 'protected media path', which is a secure Windows environment that supports DRM (Digital Rights Management) content.

Disabling this path may cause problems for Windows applications that require it, particularly video streaming apps such as the Netflix® Windows (Metro) app.

If you encounter problems with media streaming apps after installing Dante Via, you can re-enable the protected media path in the [Performance tab of the Dante Via preferences](#). This will however cause problems for Dante Via's application discovery and may prevent you from using some audio sources across the Dante network.

iTunes is not appearing in the Dante Via UI / is not playing audio. Why is this? (Windows)

iTunes may be in 'Windows Audio Session' playback mode. For compatibility with Dante Via, iTunes must be set to 'Direct Sound' playback mode.

To change the iTunes playback mode to Direct Sound:

1. Open the iTunes Preferences.
2. Click the Playback tab.
3. Change the selection for 'Play Audio Using' to 'Direct Sound', and click OK.

Then:

1. Close iTunes
2. Stop and close Dante Via
3. Open and start Dante Via
4. Open iTunes, and play some audio.

iTunes should now appear in your Sources list, and audio should flow correctly.

Device In Use (Windows)


If you attempt to subscribe a destination to a source but the subscription fails and the device appears as below, it indicates that in the Windows device properties, 'Allow applications to take exclusive control of this device' is enabled for the device, and it is being exclusively controlled by another audio application.



To use the device, either stop the application that is using the device, or disable 'Allow applications to take exclusive control of this device' for the device:

1. Right-click the speaker icon in the System tray and select 'Playback devices'.
2. Right-click the device and select 'Properties'.
3. Select the Advanced tab.
4. Deselect 'Allow applications to take exclusive control of this device'.
5. Click OK twice.


If another application takes control of the device while it is already in use by Dante Via, you may see the following error:

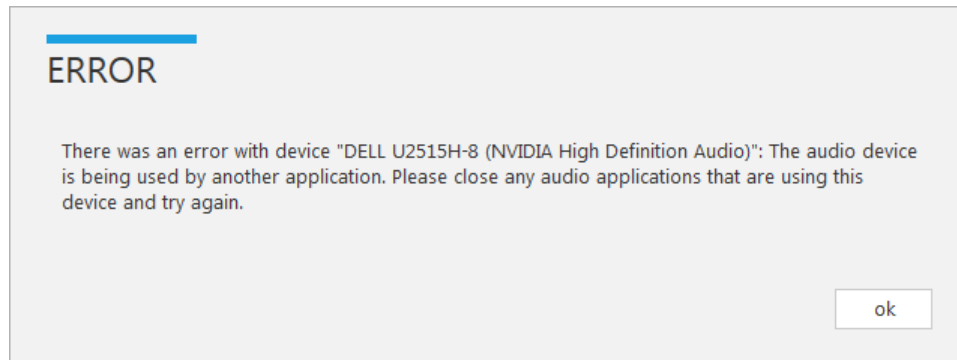

To restore the Dante Via subscription, stop the application that took control of the device, or configure it to use a different interface.

Unable to Initialize (Windows)

If a hardware interface appears as below, it usually indicates one of the following problems:

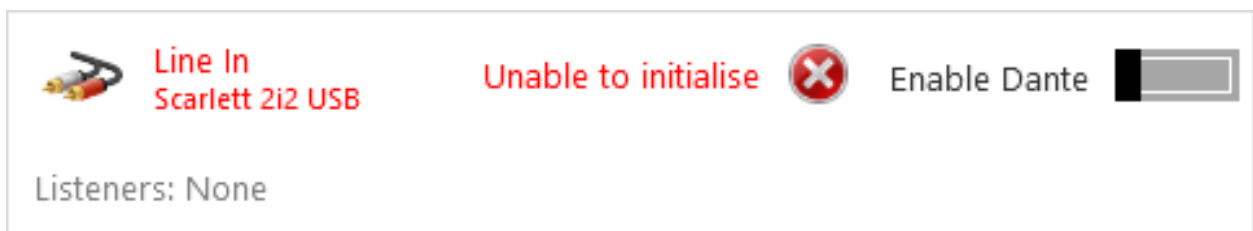

The WDM sample rate does not match the ASIO sample rate

In Windows:

1. Open the 'Playback devices' dialogue (right-click the speaker icon in the system tray).
2. Double-click the affected device.
3. Click the Advanced tab.
4. Ensure that the sample rate matches the sample rate configured in the ASIO options for the device.
5. Repeat for 'Recording devices'.

The ASIO driver is blocking the WDM driver

In some cases, if the ASIO driver is already in use, it may prevent use of the WDM driver. To free up the WDM driver, close any applications that may be using the ASIO driver (for example, DAWs).

The ASIO driver has failed

The ASIO driver may have become unstable. Try rebooting the device - in some cases you may also need to reboot the PC.

Insufficient Resources

Dante Via has a finite amount of resources available for audio routing. Resources are consumed whenever an audio route is established, and when a source or destination is exposed to the Dante network (using the 'Enable Dante' control).

When the available resources are exceeded, the insufficient resources icon is displayed in the toolbar:



Any devices that Dante Via cannot support due to insufficient resources will appear in red text.

Routing any number of channels to destinations with high channel counts, and exposing high channel-count devices or applications to the Dante network can consume resources quickly.

To avoid hitting the resources limit, you should:

- Avoid sending too many individual sources to high channel-count destinations
- Only enable Dante for sources and destinations that are immediately required for network routing
- Routinely remove audio subscriptions that are no longer required

User Interface Notifications

Icons Displayed in the Dante Via User Interface



This icon indicates that you are not physically connected to an Ethernet network.



This icon indicates network connectivity issues - typically this is because you have multiple network connections to your Dante network.



This icon can indicate one of two things - hover your mouse over the icon to see which condition has been detected:

- Dante Via is not set as the default audio device for your computer. To use Dante Via for audio, you will need to manually set Dante Via as the default audio device using the standard process for your operating system. Or:
- In Windows, the Dante Via sound device is missing or disabled. See [Checking That the Dante Via Sound Device is Enabled in Windows](#) for more information.



This icon indicates that Dante via is out of resources for audio processing. See [Insufficient Resources](#) for more information.



This icon indicates that Dante Via is currently enrolled in a domain. See [Dante Domain Manager](#) for more information.



This icon indicates that Dante Via is currently enrolled in a domain, but the DDM server is currently offline or otherwise unreachable.

Subscription Notifications

Unresolved subscriptions

A yellow subscription notification is displayed at the destination if a valid subscription cannot be resolved (for example, because a source has been removed from the network since the subscription was made).

Now Receiving (Multichannel):



Failed subscriptions

A red subscription notification is displayed at the destination if a subscription fails (for example, because the source is locked, or the source is set to an incompatible sample rate, or because the owner of the source has not granted you permission to listen to it).

Now Receiving (Multichannel):



Note: Hover over a subscription notification icon to see a tooltip describing the issue.

Common subscription notification tooltips

Source audio format incompatible

This usually indicates that the source's sample rate is not set to 48kHz (for Dante devices).

This resource is in a different clock domain

This usually indicates that the source is configured with sample rate pull-up, which has put it into a dedicated PTP clock domain.

Permission to listen has not been allowed

This indicates that the owner of the source has not granted permission for you to listen to the source, or the source is locked.

Error and Warning Messages

Dante Via has detected that Dante Virtual Soundcard is currently active on this computer ...

Dante Via and Dante Virtual Soundcard cannot be run simultaneously. Close Dante Virtual Soundcard before using Dante Via.

An older version of Dante Virtual Soundcard has been found on this computer ...

Older versions of Dante Virtual Soundcard can cause problems for Dante Via. If you require that Dante Virtual Soundcard is also installed on your Dante Via computer, it must be at the latest version.

Insufficient Resources ...

Dante Via has finite resources for managing and transporting audio. If you see an 'Insufficient Resources' error, it means that all of Dante Via's resources are currently in use, and you cannot create any new audio routes.

To free up resources, you can:

- Close running audio applications
- Disconnect peripheral audio devices
- Remove local devices and applications from the Dante network (click 'Disable Dante')
- Remove remote subscriptions to your local sources and destinations

The Dante Via Session Manager needs to restart ...

If the 'session manager' (the service that manages Dante Via audio) needs to restart for any reason, you should stop your audio applications, click OK on the warning dialog, and then restart your audio applications (when the session manager has restarted) to ensure that they are discovered again by Dante Via.

The Dante Via manager service is not running ...

You should only see this if you have manually stopped the manager service (dantevia.manager). To resolve the problem, manually restart the service.

Failed to clear configuration ... (Windows only)

This will occur if you click the 'Clear Configuration' button and you are not logged in to the computer as an administrator.

Unable to enable protected media path ... (Windows only)

This will occur if you attempt to select 'Enable Protected Media Path' and you are not logged in to the computer as an administrator.

Dante Via failed to start ...

This is rare, but can occur under some circumstances in Windows. Either manually restart the dantevia.manager service (using the Windows services manager) or restart the computer.

[Computer name] is enrolled in a domain and configuration is prevented

This indicates that Dante Via is enrolled in a domain and the DDM administrator has configured DDM to lock the Dante Via UI when it is enrolled. Contact your DDM administrator for more information.

[Computer name] is unable to contact the domain server

This indicates that Dante Via is enrolled in a domain, but the DDM server is currently offline or otherwise unreachable.


Checking That the Dante Via Sound Device is Enabled in Windows

When Dante Via is running in Windows, a Dante Via 'sound device' is instantiated, which allows the operating system to route audio to and from Dante Via.

In order for Dante Via to function, this sound device must be present and enabled. If it has been removed or disabled (by a user, or by Windows itself) you should see the following icon at the top right of the user interface:



Hovering over the icon will display text indicating that the input, output or both devices are not enabled.

 **Note:** This icon can also indicate that Dante Via is not set as the default audio device for your computer (see [User Interface Notifications](#) for more information).


There are two places in Windows where the sound device can be enabled, disabled or removed - the Control Panel sound settings, and the Device Manager.

Control Panel Sound Settings


To open the Control Panel Sound settings, open the Windows Control Panel and click 'Sound'.

If Dante Via is *running*, you should see a 'Dante Via Transmit' device in the Playback tab and a 'Dante Via Receive' device in the Recording tab.

A green tick indicates that the device is enabled and set as the default device:

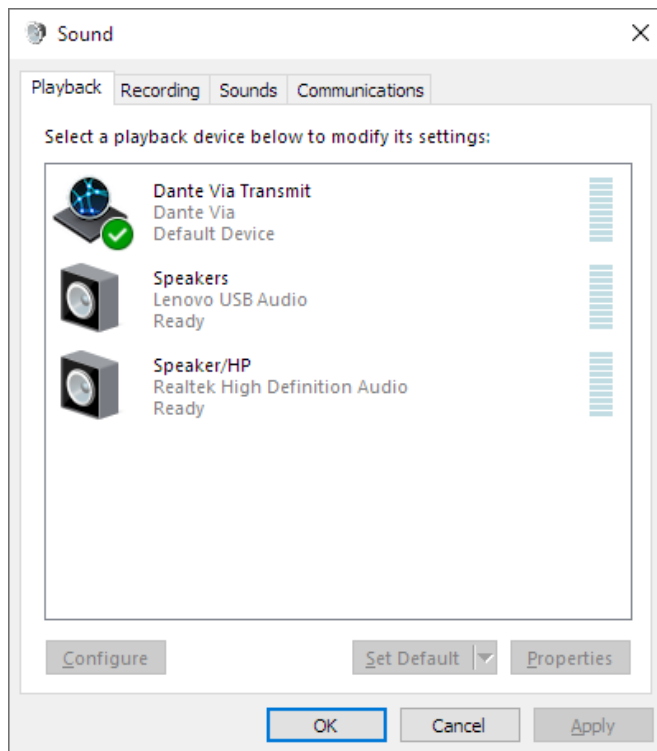

If the Dante Via device is disabled, the icon will be greyed out and listed as 'Disabled':

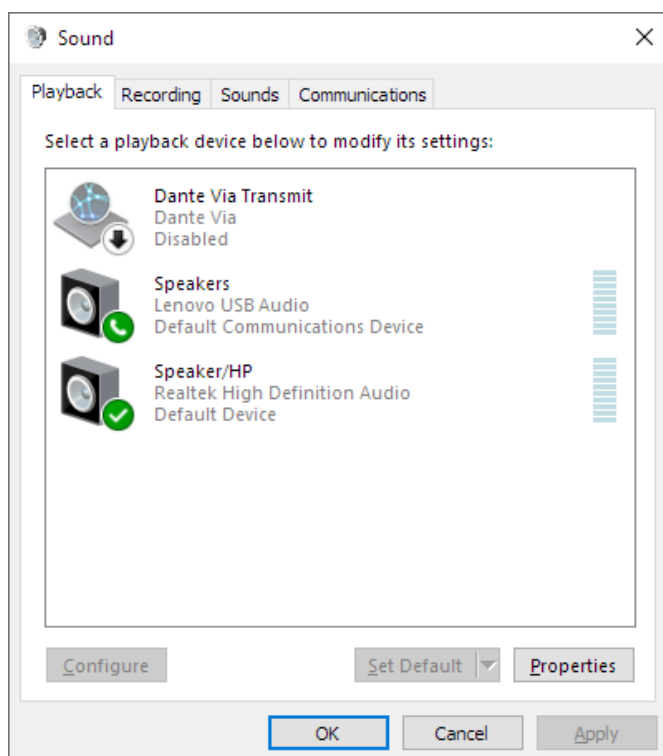


To re-enable the device, right-click the device and select 'Enable'.

If the icons are not present when Dante Via is running, reinstall Dante Via.


Device Manager

To open the Device Manager, click Start and type 'device manager'.

The Dante Via entry should be listed under 'Sound, video and game controllers'. If it is not present, reinstall Dante Via.

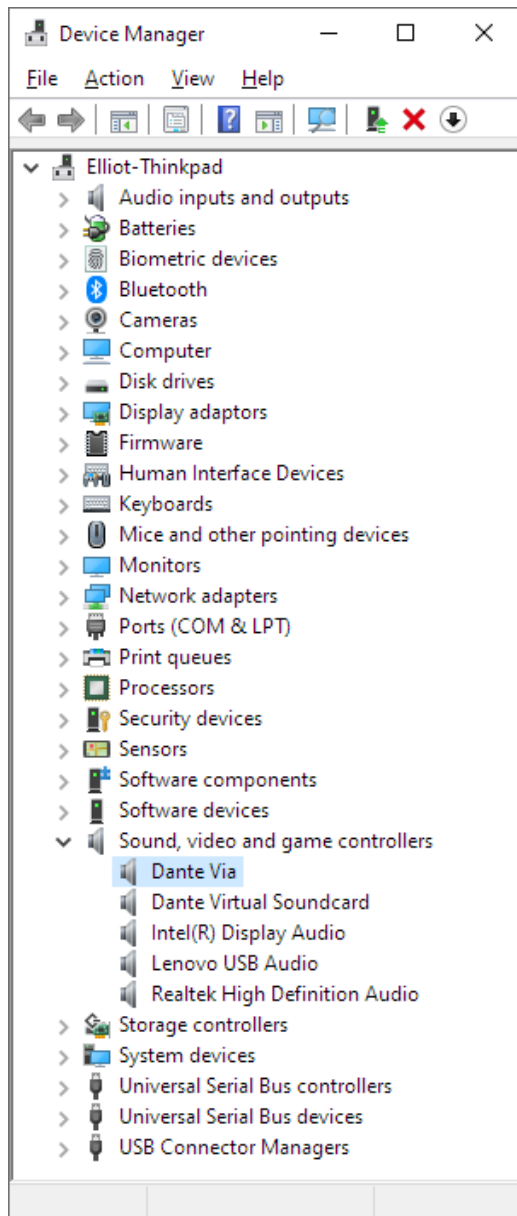

If the device has been disabled, it will appear as shown below:

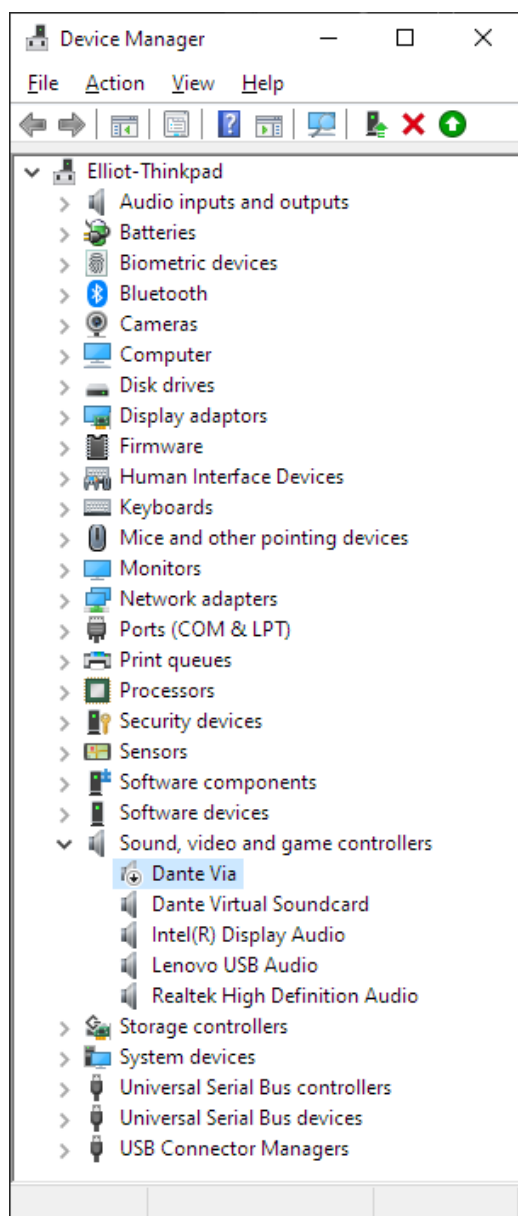

To re-enable it, right-click the Dante Via entry and select 'Enable device'.



Note: When Dante Via is running, it will also appear in the Device Manager as Receive and Transmit devices under <computer name> / Audio inputs and outputs.

Index

#

16 Ch Application Input 41
16 Channel Application Input 19, 41

A

About Audio Interface Drivers 19
Absence of Audio 54-55
Activation 21
Add Source to Mix 37
Aggregate 11
All Applications Mix 40, 43
An older version of Dante Virtual Soundcard has been found on this computer ... 60
Application support 13
Applications 18
ASIO 19
ASIO Devices 19
Audio destinations not appearing 53
Audio Format 47
Audio Problems 49
Audio Routing Permission in macOS 10.15 42
Audio sources not appearing 51-53
Automatically check for updates 27

B

Built-in Input 41
Built-in Output 41

C

Channel Mapping 46
Checking That the Dante Via Sound Device is Enabled in Windows 61
Clear Configuration 27
Clear Domain Credentials 33
Clear Permissions 29, 40
Configuring Your Computer 34
Connecting Sources to Destinations 35
Control Panel 62
Core Audio 19
CPU 15

D

Dante Controller 45

Dante Devices 18
Dante Domain Manager 47
Dante Network 10
Dante Via failed to start ... 61
Dante Via has detected that Dante Virtual Soundcard is currently active on this computer ... 60
Dante Via input and output sound devices are not enabled 61
Dante Via input sound device is not enabled 61-62
Dante Via is enrolled in a domain and configuration is prevented 61
Dante Via is unable to contact the domain server 61
Dante Via Main Screen - OS X 23
Dante Via Main Screen - Windows 24
Dante Via output sound device is not enabled 61-62
Dante Via won't run 49
DDM 47
Default Audio Interface 34
Default Devices 43
Default Input Device 43
Default input device for applications 27
Default Output Device 43
Default output device for applications 27
Destinations 16
Destinations Not Appearing 53
Destinations not appearing 53
Device In Use 56
Devices 18
Digital Rights Management 55
Direct Sound 56
Distorted Audio 54
Domains Preferences 32
DRM 30, 55

E

Enable Dante 44
Error and Warning Messages 60
Ethernet 29
Ethernet network. 58
Exposing Destinations 45
Exposing Sources 44
Extend 11

F

Failed subscriptions 60
 Failed to clear configuration ... 61
 Firewire 11

G

General Preferences 26
 Grayed out 39

H

Hardware channel support 13

I

I don't have a license key 49
 Inactive Sources 39
 Insufficient Resources 58
 Insufficient Resources ... 61
 iTunes is not appearing in the Dante Via UI / is not
 playing audio 56

L

Latency 13, 47
 Licensing 21
 Licensing and Activation 49
 Local Applications 19
 Local ASIO Audio Devices 18
 Local Audio Devices 18
 Locking Preferences 31

M

Make new applications available on the network
 automatically 28
 Make new audio devices available on the network
 automatically 28
 Microsoft .NET framework 49
 Monitor 12
 Multichannel 12
 Mute All 46
 Muted 35
 Muting Sources 40

N

Netflix 31, 55
 Network 13
 Network devices require my permission ... 28
 Network Interface 29
 Network Preferences 29
 Now Receiving 36

O

Offline 22
 Open Dante Controller 45

P

Performance 30
 Performance Optimization 30
 Performance Preferences 30
 Performance Tracing 30
 Permissions 45
 Play Audio Using 56
 Privacy 45
 Privacy Preferences 28
 Protected Media 30
 Protected media path 55

R

RAM 15
 Receive flows 13
 Red text 58
 Removing Listeners 40
 Removing Sources 39
 Replace Mix with Source 37
 Resources 58
 Route Audio 45

S

Sample bit depth 13
 Sample rate 13, 47
 Searching 26
 Send Audio 12
 Show ASIO compatible audio devices 20, 27
 Show Hidden Audio Devices 27
 Software Applications 44
 Software channel support 13
 Software sources not appearing 52
 Sound Device 61
 Sound Settings 62
 Soundcard 11
 Sources 16
 Sources not appearing 50
 Specifications 13
 Starting Dante Via 35
 Stereo Application Input 19, 41
 Stop / Start Dante Via 26
 Stopping Dante Via 35

Streaming 55
Subscription 36
Subscription Notifications 60
Switching Computer Accounts 35
System Requirements 15
System Sounds 43

T

The Dante Via manager service is not running
... 61
The Dante Via Session Manager needs to restart
... 61
Transmit flows 13
Troubleshooting 49

U

Unable to enable protected media path ... 61
Unable to Initialize 57
Unresolved subscriptions 60
USB 11
User interface is empty 49
User Interface Notifications 58
Using Dante Via with Dante Domain Manager 47

V

Via Devices 18
Video 55
Video streaming 31
Volume Mixer 25

W

WDM 19
Windows Audio Session 56